

Manual for OS Pre-installed Type

(Windows 10 IoT Enterprise 2021 LTSC)

Business Computer

VPC-720 Series

CONTENTS

Introduction.....	4
Notes Regarding Use.....	10
Setup procedures	16
System Information.....	20
Power Failure Protection.....	44
Recovery Method	48
Customer Support and Inquiry.....	53

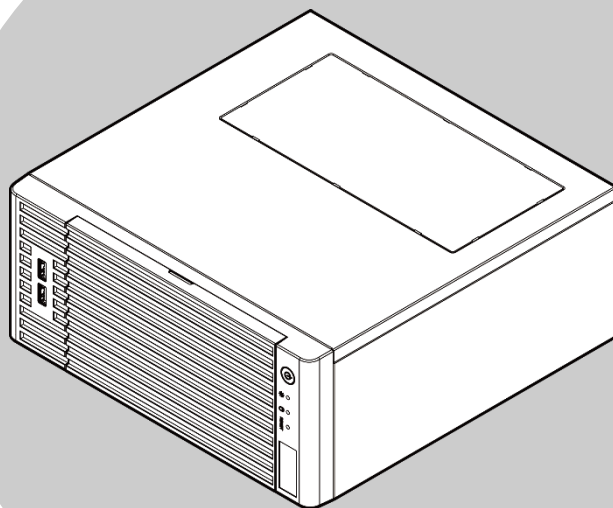


Table of Contents

Introduction4

- 1. About the Product..... 5
- 2. Related Manuals 6
- 3. Manual composition..... 7
- 4. CONTEC Software License 8

Notes Regarding Use10

- 1. Safety Information..... 11
- 2. Handling Precautions..... 12
- 3. About Unified Write Filter..... 13
- 4. Security Warning..... 15
 - 1. Information security risks..... 15
 - 2. Security measures – e.g..... 15

Setup procedures16

- 1. Windows setup..... 17

System Information20

- 1. Basic Information..... 21
- 2. Storage and Partition Configuration..... 22
- 3. Programs and Features 23
 - 1. Installed software..... 23
 - 2. Installed updates..... 23
 - 3. Enable or disable Windows functions 24
 - 4. UWF settings..... 26
- 4. Set to factory default values..... 29
 - 1. Panel..... 29
 - 2. Ethernet settings..... 30
 - 3. Serial Port Settings 32
 - 4. Optional power settings..... 33
- 5. Changing the language..... 34
- 6. Windows Update 38
- 7. CONTEC Solution Manager 39
 - 1. Overview..... 39
 - 2. How to start 39
 - 3. Properties screen 40
 - 4. UWF settings..... 41
- 8. Trellix Security..... 42

Table of Contents

Power Failure Protection44

- 1. About Power Failure Protection.....45
 - 1. When the Power Failure Protection is used.....45
 - 2. When the Power Failure Protection is not used46

Recovery Method48

- 1. Preparations.....49
- 2. Procedure50
 - 1. BIOS settings.....50
 - 2. OS installation51
 - 3. Start OS.....52

Customer Support and Inquiry.....53

- 1. Services.....54

Introduction

This will inform you of the information you need to know before using this product, such as an overview of the OS equipped with the preinstalled type, the overall configuration of this manual, the various manuals associated with this product, and so on.

1.About the Product

Windows 10 IoT Enterprise 2021 LTSC, equipped with the preinstalled type, is the OS for embedded applications. CONTEC's preinstalled types perform customization to build the OS based on a configuration determined in advance.

In this manual you will find basic information on the installed OS, as well as explanations of setup procedures and recovery procedures.

CAUTION

There are functional differences between Windows 10 IoT Enterprise 2021 LTSC and other Windows 10 versions.

Below are the main functions present in other Windows 10 versions but not in Windows 10 IoT Enterprise 2021 LTSC.






- System applications
Store, Cortana
- Universal applications
E-mail, Calendar, OneNote, Weather, News, Sports, etc.

2.Related Manuals

The manuals related to the product are listed below.

Read them as necessary along with this document.

◆ Must Read the Followings.

Name	Purpose	Contents	How to get
Product Guide	Must read this after opening the package.	This lists the product configuration and describes the precautions.	Included in the package (Printed matter)
Reference Manual	Read this when operating the product.	This describes the hardware aspects such as functions and settings.	 Download from the Contec website (PDF)
IPC Precaution List	Read this before operating the product.	This describes the precautions when using the product.	 Download from the Contec website (PDF)
MICROSOFT SOFTWARE LICENSE TERMS	Must read this after opening the package.	This describes the rights and conditions of user when using Windows software.	 Download from the Contec website (PDF)
Trellix Security *1	Must read this after opening the package.	This describes the rights and conditions of user when using Trellix Security software.	 Download from the Contec website (PDF)
Manual for OS Pre-installed Type (This Document) *2	Must read this after opening the package.	This explains basic OS information, setup procedures and recovery procedures.	 Download from the Contec website (PDF)

*1 Reference for Trellix Security pre-installed types only.

*2 Reference for pre-installed models only.

◆ Download End-user License Agreements

Download it from the following URL.

Download

<https://www.contec.com/support/useterms/>

◆ Download Manuals

Download the manuals accordingly from the following URL.

Download

<https://www.contec.com/download/>

3. Manual composition

This manual is composed as follows:

Chapters ▼	Descriptions ▼
Introduction Provides you with the information you need to know before using the OS equipped with the preinstalled model. Refer to other related manuals as necessary.
Notes Regarding Use Gives notes/precautions regarding use.
Setup procedures Explains the procedures for setting up Windows after opening this product. Setup will be performed interactively.
System Information Explains the preinstalled model' s basic system information and main device driver versions, etc.
Recovery Method Explains how to recover the OS in the event that it is unable to start.
Customer Support and Inquiry Services and inquiry.

4. CONTEC Software License

SOFTWARE LICENSE AGREEMENT

PLEASE READ THIS SOFTWARE LICENSE AGREEMENT (the "Agreement") CAREFULLY BEFORE USING CONTEC'S SOFTWARE. THIS AGREEMENT SET FORTH TERMS AND CONDITIONS REGARDING THE LICENSE TO USE CONTEC'S SOFTWARE ONTO WHICH THE AGREEMENT IS ATTACHED (the "Software"). BY DOWNLOADING, INSTALLING OR USING THE SOFTWARE OR USING MACHINERY ONTO WHICH THE SOFTWARE HAS BEEN INSTALLED, CUSTOMERS ARE AGREEING TO BE BOUND BY THE AGREEMENT. CUSTOMERS MAY NOT DOWNLOAD, INSTALL OR USE THE SOFTWARE OR ANY MACHINERY ONTO WHICH THE SOFTWARE HAS BEEN INSTALLED WITHOUT AGREEING TO THE AGREEMENT.

Article 1. Intellectual Property Rights

The copyright, patent right or any other intellectual property right pertaining to the Software or any documentary attachments, such as manuals, as well as any copies thereof (the "Software and the Like") shall belong to CONTEC, and customers shall have no rights therefor other than those expressly authorized herein.

Article 2. Permitted License

1. CONTEC grants customers a non-exclusive right to install and use, free of charge, the Software solely for the purpose of using hardware products onto which the Software has been installed.
2. Customers may copy the Software for a minimum number of times as necessary solely for emergency backup purposes in using the Software. However, description regarding any of the rights pertaining to the Software supplied by CONTEC shall be attached to any such copies.
3. Customers may incorporate software provided by CONTEC as a library onto software created by the customer.

Article 3. Restrictions on Use

Customers shall not:

- (1) Create any derivative software from the Software other than as set forth herein;
- (2) Copy the Software other than as set forth therein;
- (3) Modify, adapt, decompile, disassemble or reverse-engineer the Software; or
- (4) Delete or alter the representation or trademark of the rights of the Software.

Article 4. Limited Liabilities

1. CONTEC HEREBY DISCLAIMS ANY WARRANTY WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE AND/OR NON-INFRINGEMENT OF THIRD PARTY RIGHTS.
2. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL CONTEC BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE AND THE LIKE.

Article 5. Transfer

1. Customers may transfer their rights authorized them with respect to the Software and in accordance herein to a third party only when the customer satisfies all of the following conditions:
 - (1) The customer transfers the Agreement and the Software and the Like to such third party;
 - (2) The customer transfers to such third party all CONTEC hardware products onto which the Software has been downloaded; and
 - (3) The recipient of the transfer agrees to the terms and conditions herein.

Article 6. Termination

1. CONTEC may terminate the Agreement with immediate effect without any notice or demand to the customer if the customer fails to comply with any of the provisions herein.
2. Upon the termination of the Agreement, the customer's license shall cease to be effective. The customer shall immediately discontinue using the Software in any way, and shall uninstall and destruct any reproduction of the Software.

Article 7. Export Control

1. Customers shall comply with the Foreign Exchange and Foreign Trade Act of Japan, the U.S. Export Administration Regulation and the laws and regulations of any other country when taking the Software and the Like outside Japan.
2. Customers shall not transfer, export or re-export the Software and the Like to any individual or entity that is likely to use the Software and the Like to design, develop or manufacture nuclear weapons, biochemical weapons, or to design, develop or manufacture missiles.
3. Customers shall not transfer, export or re-export the Software and the Like to any individuals or entities set forth in the following countries or regions:
 - (1) The Republic of Cuba, The Islamic Republic of Iran, the Republic of Iraq, the Great Socialist People's Libyan Arab Jamahiriya or North Korea;
 - (2) Any individuals or entities on the "List of Foreign Users" based on the Import Trade Control Order or the U.S. Department of Commerce Denied Person's List or Entity List; or
 - (3) Any country, region, individual or entity designated by the government of Japan, the U.S. or any other relevant country.

Article 8. Governing Law

The provisions herein shall be construed and governed in accordance with the laws of Japan. This Agreement shall not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded.

Article 9. Dispute Resolution

Upon the occurrence of any dispute in relation to the Agreement or the Software, if any legal procedures are required, such as the filing of a petition for a lawsuit, the Osaka District Court shall have the exclusive jurisdiction over such dispute.

Article 10. Severability

If for any reason any portion of the provisions set forth herein is found to be invalid or unenforceable, the remainder of the Agreement shall not be affected in any way and shall be valid and enforceable to the extent permitted by law.




Notes Regarding Use

This manual explains the precautions for using the product safely. Please make sure to read this before using this product.

1.Safety Information

This document provides safety information using the following symbols to prevent accidents resulting in injury or death and the destruction of equipment and resources.

Understand the meanings of these labels to operate the equipment safely.

 DANGER	Signal word used to indicate an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

2. Handling Precautions



CAUTION

- The specifications of the product are subject to change without notice for enhancement and quality improvement. Even when using the product continuously, be sure to read the manual in the CONTEC's website and understand the contents.
 - Do not modify the software. CONTEC will bear no responsibility for any problems, etc., resulting from modifying the software.
 - Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using the software.
-

3.About Unified Write Filter

Unified Write Filter function (referred to as "UWF" in this document) is the new filtering which combined EWF, FBWF, and Registry filter.

UWF has deterred the write to DISK by redirecting the write to DISK from operating system or application to overlay.

- If you are updating software, adding data, or changing the settings, make sure to disable the UWF filter settings before doing so.
- Even if shut down, the contents written to the memory will not be written back to the disk. They will be deleted if you shut down or restart the system.

UWF of preinstalled type is not suitable for all configurations.

In particular, it is unsuitable for "the configuration which a lot of write requests generate from operating system or application to protected DISK." Under such an environment, restarting Windows is frequently needed.

The following describes a limitation for the specification of the UWF function in Windows 10 IoT Enterprise 2021 LTSC. Understand it completely for implementation.

CAUTION

- Removable media (USB memory etc.) cannot be set as the UWF candidate.
- Folders or files that are excluded from protection cannot be moved into the protection area.
If a "Recycle Bin" is an object for protection, it becomes as a deleting error since Explorer once moves the file to "Recycle Bin". In this case, delete the object without going through "Recycle Bin" by using Shift+Del keys on the keyboard.
- The function of File Exclusion and Registry Exclusion are available only in a FAT/NTFS volume.
- Volumes, such as exFAT, can be protected by UWF. However, the function of protect exclusion cannot be used.
- UWF supports NTFS. However, since the journal file of NTFS is recorded until a services of UWF begins, writing to DISK occurs upon starting up.
- UWF cannot protect a Hidden partition.
- If UWF is set to Enabled and starts up, some functions in Windows are changed for the performance improvement of UWF.
- Check the technical information for details from the link listed below.
Please refer to the Microsoft technical information for details about UWF.
[https://msdn.microsoft.com/ja-jp/library/windows/hardware/mt572001\(v=vs.85\).aspx](https://msdn.microsoft.com/ja-jp/library/windows/hardware/mt572001(v=vs.85).aspx)
- In early stages, a UWF overlay region serves as maximum size of 1024 MB.
The present operating condition of a UWF overlay region can be checked by the following command.
`>uwfmgr.exe overlay get-consumption`
Systems operation is required so that a UWF overlay region may not be used to maximum size.

As the application software used by a user or Windows operation can be affected, it is necessary to restart Windows in accordance with a system application, and to release a UWF overlay region.

- The following measures are sufficiently effective though there are no complete measures.
 - Avoid writing in the protected volume as much as possible.
 - When writing in a log file, change to other volume that are excluded from protection write.
(Drives: USB memory and network storage, etc.)
-

4. Security Warning

When connecting to the network, be aware of security-related problems. See the examples of Security measures below and set up the product properly along with the network devices.

1. Information security risks

- Unauthorized access from the outside through a network could cause the system halt, data damage, or exposure to malware. *1
- Invaded and used as a stepping stone, a device might attack the others through networks. (a victim becomes an assailant)
- Information might leak without realizing due to the connection to the network.
- Secondary damages such as harmful rumors, liability in damages, social credibility fall, and opportunity loss are expected led by the troubles described above.

*1: Malware (Malicious Software) is software that brings harm to a computer system and performs unintended operations.

2. Security measures – e.g.

- Do not keep using the default password. (Refer to the product manual for the password setting).
- Set a strong password.

Combined with upper and lowercase letters, and numbers so that it cannot be easily analogized by others.

- Change the password periodically.
- Disable unnecessary network services and functions.
- Restrict access to the network with network devices. *2
- Restrict ports to be released on the network with network devices. *2
- Create a closed network connection using such as dedicated network or VPN*3

*2: Inquire for setting procedure to manufacturers.

*3: VPN (Virtual Private Network) a secured network that wards off unauthorized access by protecting the communication path with authentication and encryption.

Unfortunately, there are no perfect ways to avert unauthorized access or close a security hole that are endlessly found day and night.

Please understand that risks are always involved with the Internet connection, and we strongly recommend a user should constantly update information security measures.

Setup procedures

This manual describes the setup procedure that a user needs to perform after unpacking the product with a pre-installed operation system.

The setup of Windows is performed interactively.

1. Windows setup


Check that the monitor, the keyboard and the mouse are connected with the PC. Do not connect other devices until a Windows setup is completed. After confirming the connections, turn on the PC power.

CAUTION

- The screen change during the setup operation may take time for a while.
- Do not turn off the power of the personal computer during the setup operation. Turning off the computer power before completing the setup will result in Windows system damages.
- The HDD/SSD built into the preinstalled type are GPT formatted. And, OS area is formatted by NTFS.
- The display driver, the LAN driver, the audio driver, etc. are already incorporated. However, since a network setup is needed separately, please consult with the system administrator of a connection place network.
- It is not necessary to enter a Windows product key into this product.
- If you do not connect the PC to the Internet at all, activating Windows (license authorization) is unnecessary.


Please wait for the Windows setup starts.

Follow the instructions on the display after start-up.

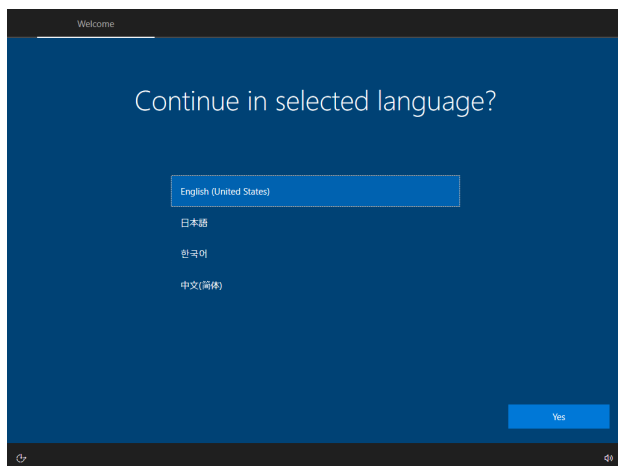


1. The language choice for Windows appears on the display. Select the language. Display language changes to the selected one. And, click the .


The example which selected English explains a step.

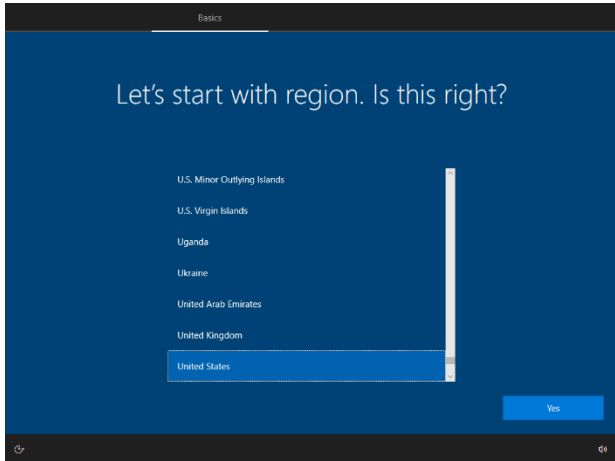

2. Select your home region.
And, click the

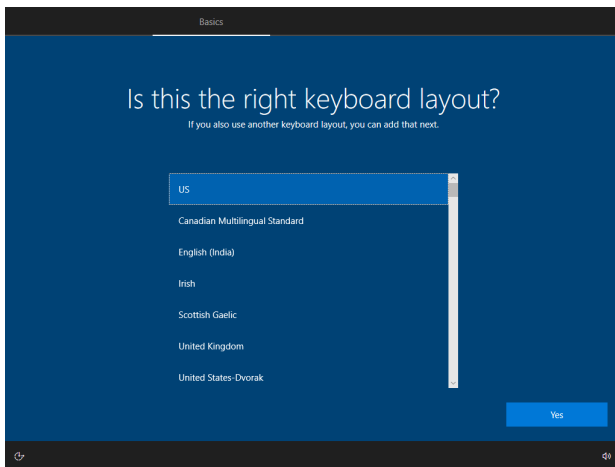


3. Select keyboard layout.
And, click the .

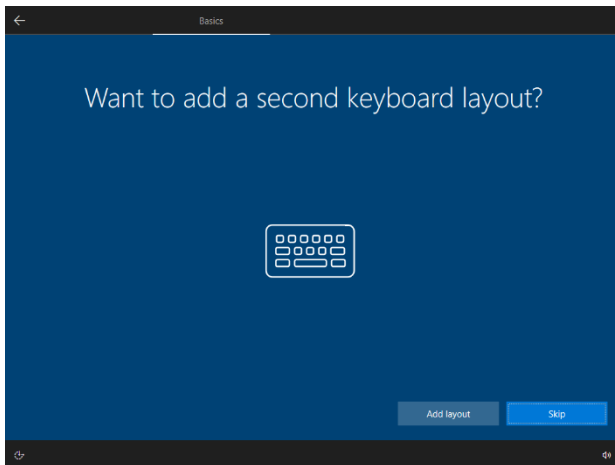


4. Select additional keyboard layout.
If not, click the .



5. It is a document regarding License.
Click the .

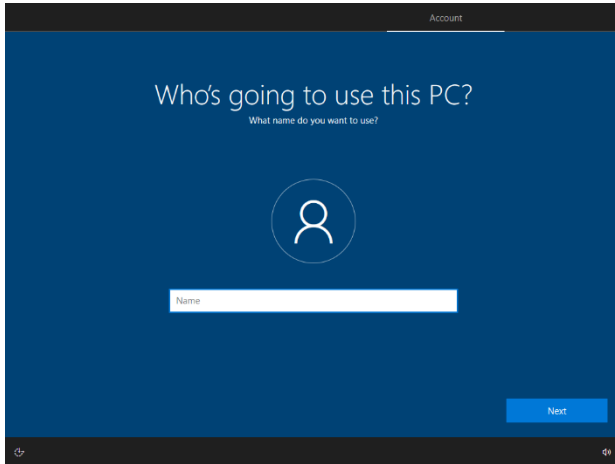


6. Then, the display of creating account can be viewed. Enter the account name to be used. Click the **Next** .

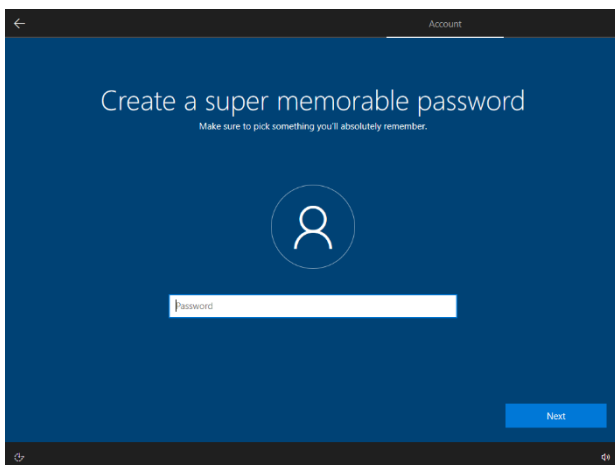


7. Then, the display of creating password can be viewed.

When a password is omitted, an automatic logon can be made by the created account. Click the **Next** .

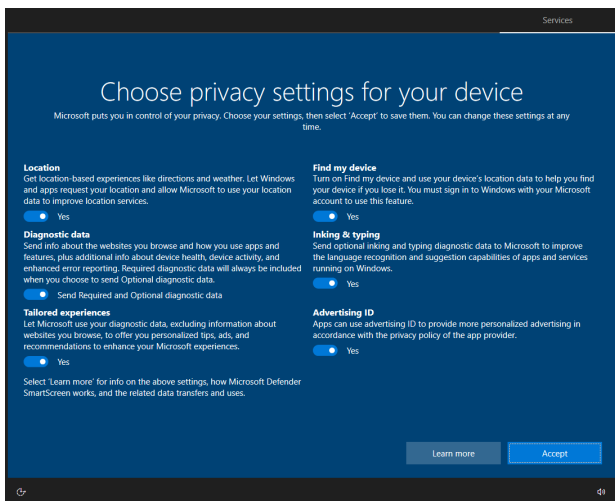

8. It is a setup regarding OS operation. Click the **Accept** .

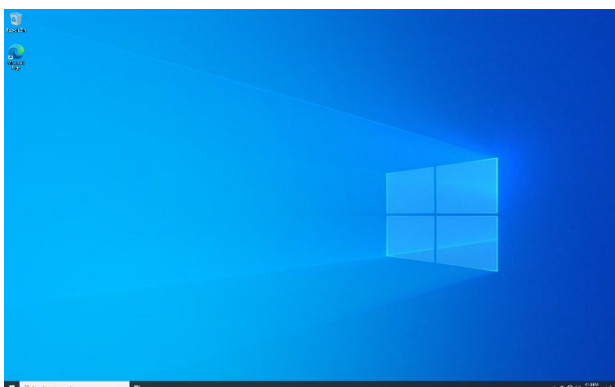

9. When a password setting is skipped, an automatic logon can be made by the created account (user name).

System Information

Explains the preinstalled type's basic system information and main software versions, etc.



1. Basic Information

☒ Embedded function ☐ Unembedded function

Item	Details				
Version	21H2				
Build version	19044.4651 (KB5040427)				
Language components	<input checked="" type="checkbox"/> English <input checked="" type="checkbox"/> Japanese <input checked="" type="checkbox"/> Simplified Chinese <input checked="" type="checkbox"/> Korean <input type="checkbox"/> Other ()				
	Component	English	Japanese	Simplified Chinese	Korean
	Basic	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Font	-	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Handwriting recognition	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Optical character recognition	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Speech synthesis	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Speech recognition	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	-
Main functions and versions	Internet Explorer	11.0.19041.4355			
	Microsoft Edge	92.0.902.67			
	Windows Media Player	12.0.19041.4648			
	Microsoft .NET Framework	4.8.04084			
	Remote Desktop Connection	10.0.19041			
	Remote Desktop Protocol	10.8			
Security	Trellix Security *1	8.4.2.671			
CONTEC utilities	CONTEC Solution Manager	1.1.2			
Supply schedule	Mainstream support end date	January 12, 2027			
	Extended support end date	January 13, 2032			
	End of Life	November 30, 2031			

*1 Pre-installed with Trellix whitelist security software.

2.Storage and Partition Configuration

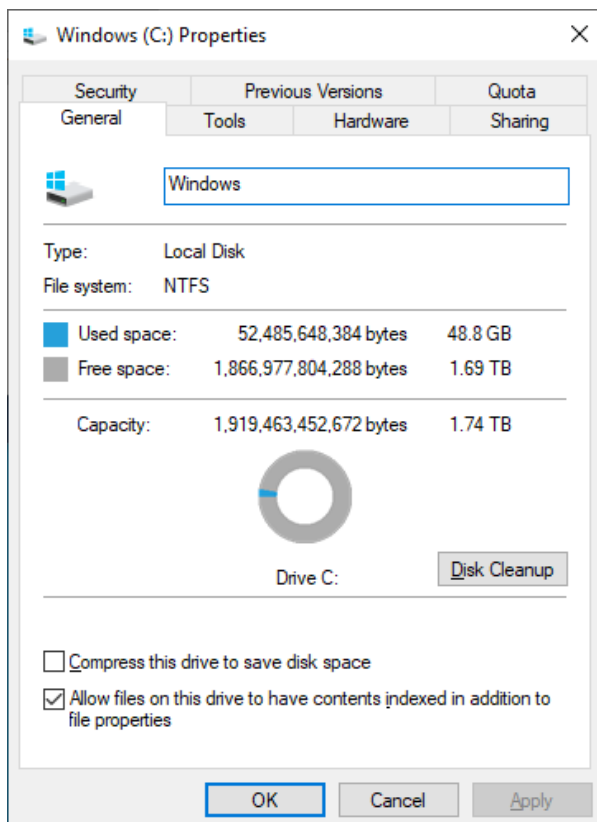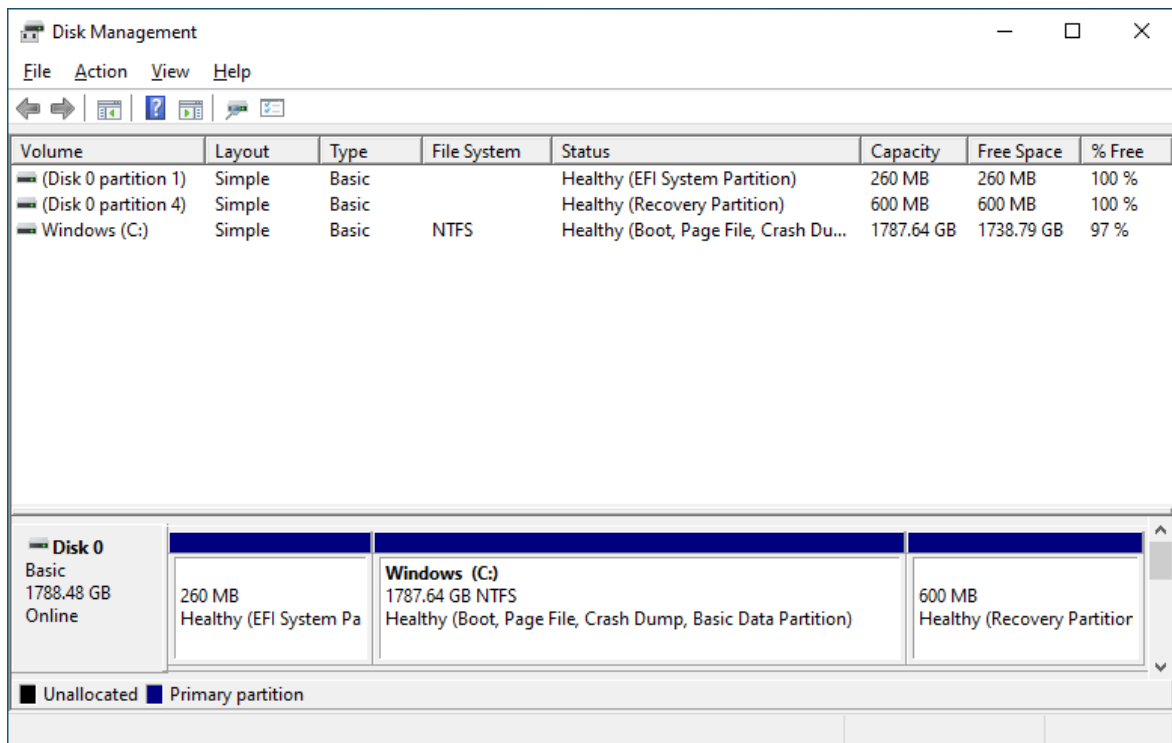


* The disk usage indicated is a reference value.

3. Programs and Features


1. Installed software

View a list of installed software

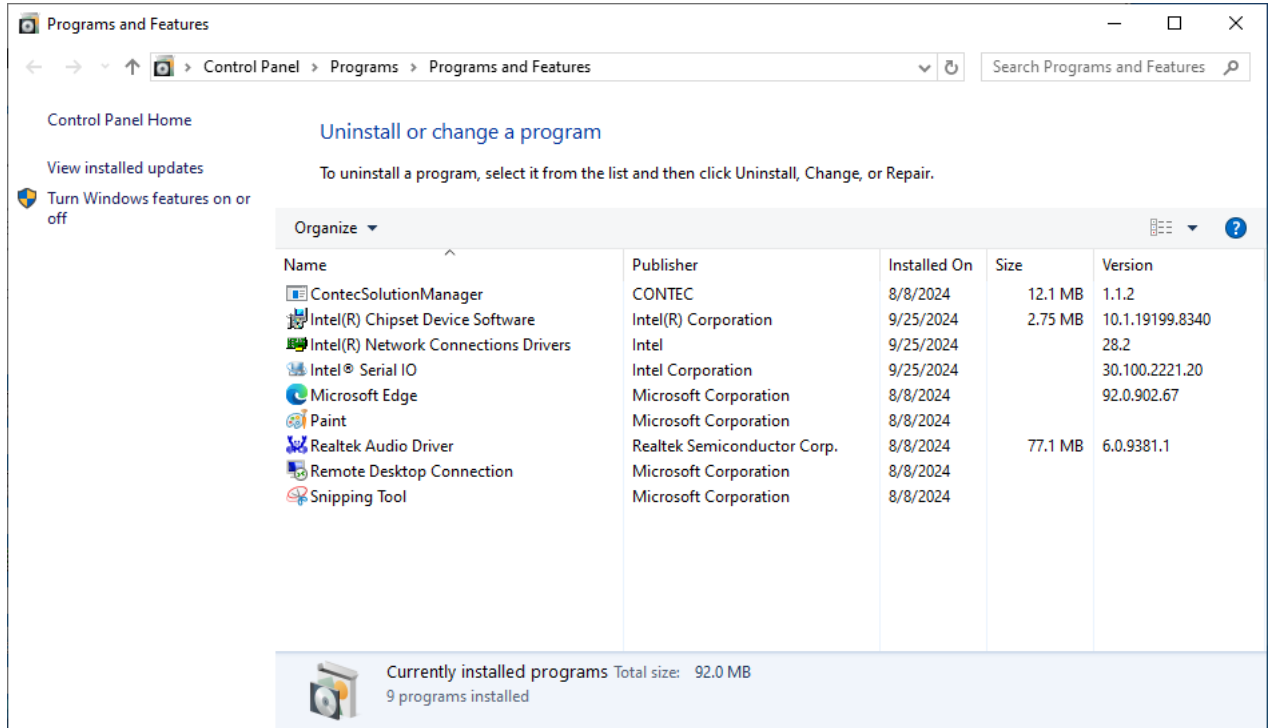


2. Installed updates

View a list of installed updates.

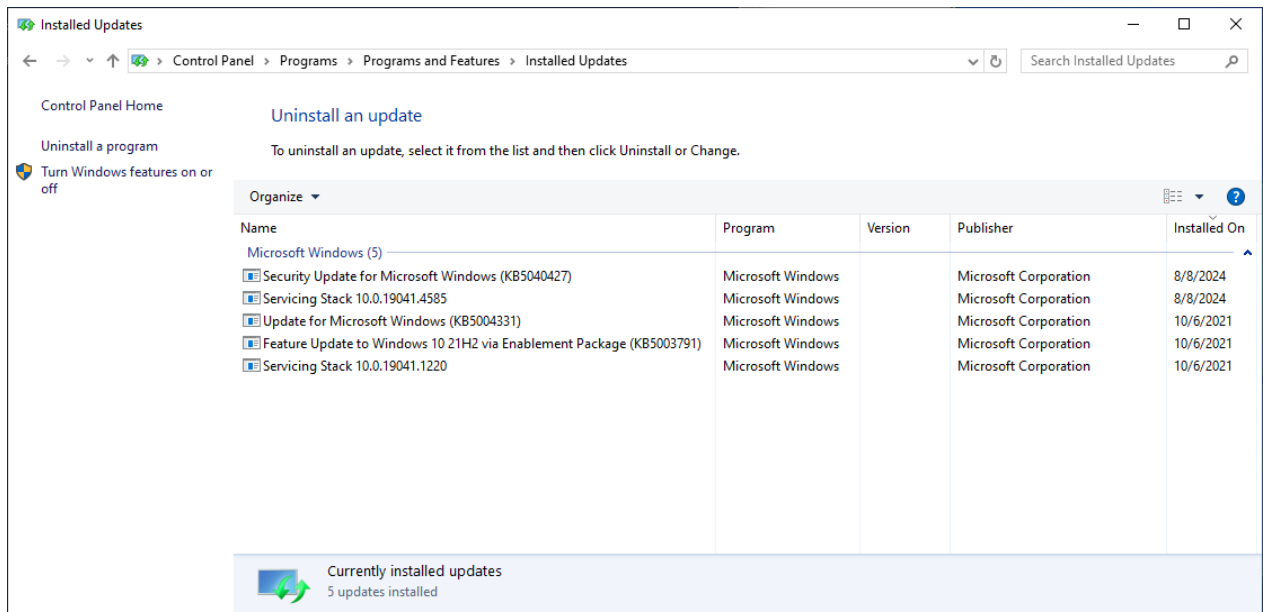


3. Enable or disable Windows functions

.NET Framework 3.5 is installed in the preinstalled type.

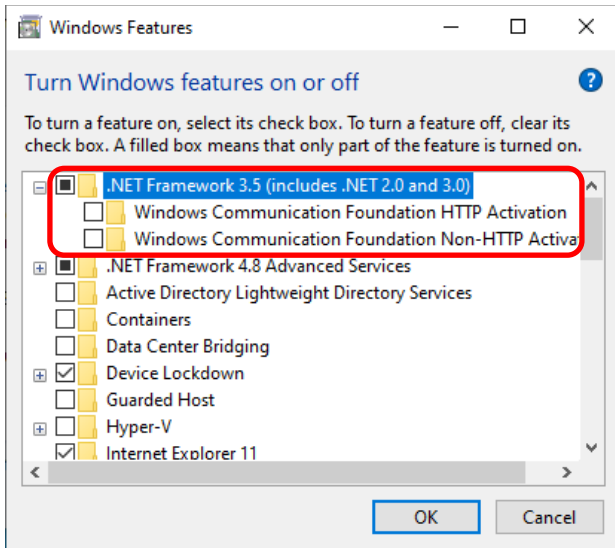


Selecting "Turn Windows features on or off" will allow you to check related items.

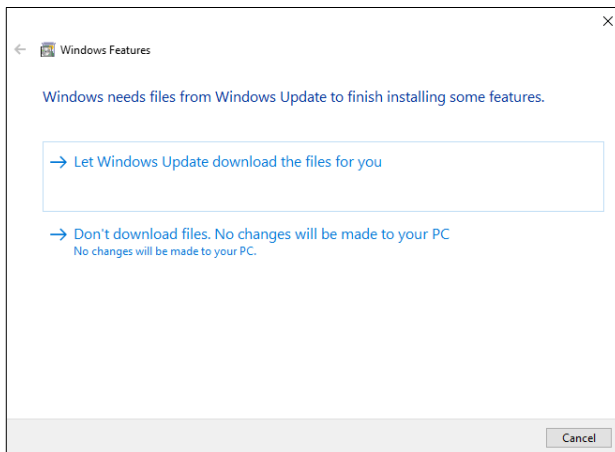

If you have used "Turn Windows features on or off" to disable a related item, when reenabling it a "File download" message will be displayed and you will not be able to enable it. In order to reenabling it, you will need to follow the instructions on the screen while connected to the Internet to perform setup, or recover the preinstalled type.

Under CONTEC preinstalled type factory default settings, Device Lockdown is enabled.

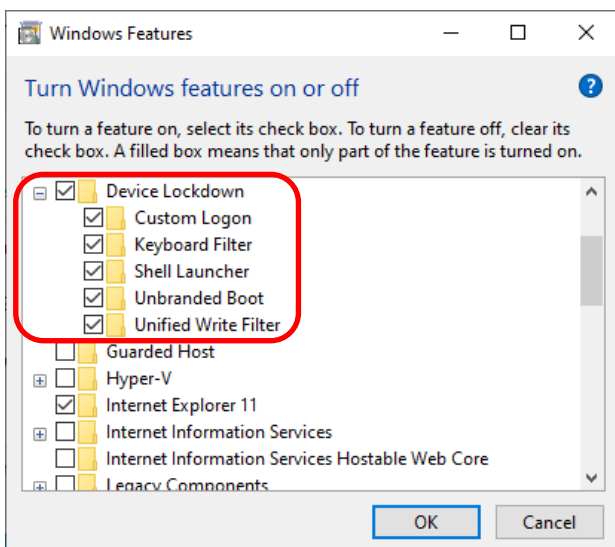

Using the lockdown function, you can restrict unintentional user operations or control information displayed on the screen.

Function name	Overview
Shell Launcher	Turning on the power, the device will sign in to an environment in which only designated programs can be run.
Custom Logon	Suppresses Windows component display during Windows startup, restart and shutdown, as well as when signing in.
Keyboard Filter	Prevents undesirable keyboard operations.
Unbranded Boot	Suppresses the display for the Windows loading screen. https://docs.microsoft.com/ja-jp/windows-hardware/customize/enterprise/unbranded-boot
Unified Write Filter (UWF)	Restricts writing to the protected disk, preventing alterations and falsifications of the system.

4. UWF settings

For UWF settings, use either the Microsoft console application UWF manager (uwfmgr.exe) or CONTEC Solution Manager, the GUI application installed in the preinstalled type.

The UWF function's filter is disabled by default. The following explains the procedure for checking the UWF settings using UWF manager (uwfmgr.exe).

□ indicates a space.

```

Administrator: Command Prompt
C:\Windows\system32\uwfmgr get-config
Unified Write Filter configuration utility version 10.0.19044
Copyright (C) Microsoft Corporation. All rights reserved.

Current Session Settings

FILTER SETTINGS
  Filter state: OFF
  Commit pending: N/A
  Shutdown pending: N/A
  HORM mode: N/A

SERVICING SETTINGS
  Servicing State: OFF

OVERLAY SETTINGS
  Type: RAM
  Maximum size: 1024 MB
  Warning Threshold: 512 MB
  Critical Threshold: 1024 MB
  Read Only Media: OFF
  Freespace Passthrough: OFF
  Persistent: OFF
  Reset Mode: N/A
  Reset Saved Mode: N/A

VOLUME SETTINGS
  *** No volumes configured

REGISTRY EXCLUSIONS
  *** No exclusions

Next Session Settings

FILTER SETTINGS
  Filter state: OFF
  Commit pending: N/A
  Shutdown pending: N/A
  HORM mode: N/A

SERVICING SETTINGS
  Servicing State: OFF

OVERLAY SETTINGS
  Type: RAM
  Maximum size: 1024 MB
  Warning Threshold: 512 MB
  Critical Threshold: 1024 MB
  Read Only Media: OFF
  Freespace Passthrough: OFF
  Persistent: OFF
  Reset Mode: N/A
  Reset Saved Mode: N/A

VOLUME SETTINGS
  *** No volumes configured
  
```


Start Command Prompt (with administrator authority).

Input "uwfmgr□get-config" and press the [Enter] key. View current settings status.

Item	Display	Meaning
Volume state	OFF	Enabling the UWF
	ON	Disabling the UWF
VOLUME SETTINGS	None/Un-protected	Invalid Volume Protect
	Protected	Effective Volume Protect


This is the CONTEC factory default settings status.

When UWF is enabled, writing to the disk will be restricted, allowing for the lifetime of disks with writing restrictions to be lengthened. It also allows you to prevent unintentional system alterations. Below is a configuration graph of the UWF functions.

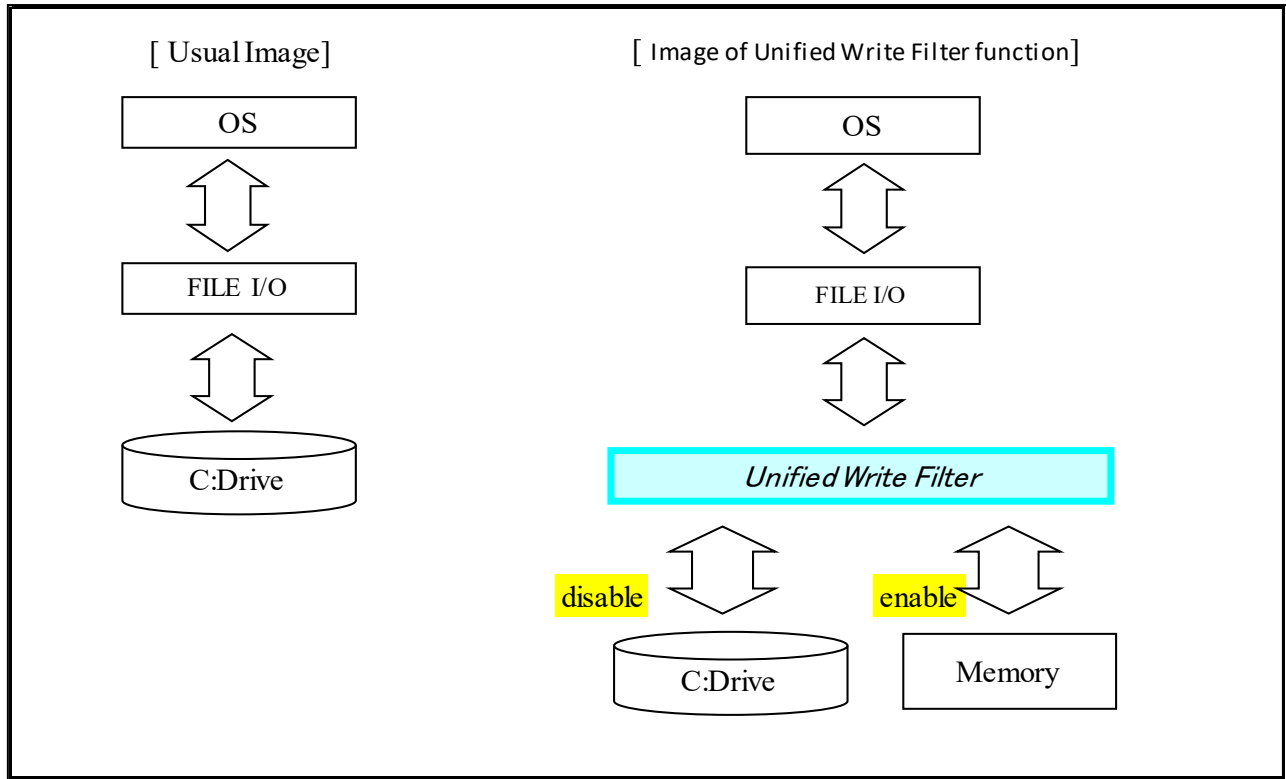


The following explains the method for setting write protection for the C drive using UWF manager (uwfmgr.exe).


□ indicates a space.

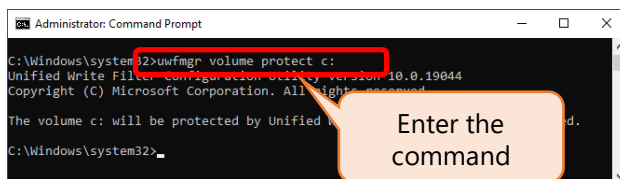

1. Input "uwfmgr□volume□protect□c:" and press the [Enter] key.

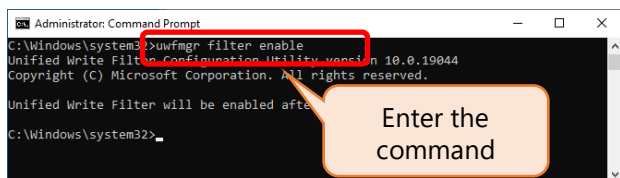

2. Input "uwfmgr□filter□enable" and press the [Enter] key.

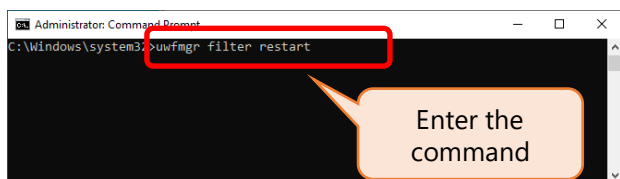

3. Input "uwfmgr□filter□restart" and press the [Enter] key. Restart Windows.

```

Administrator: Command Prompt
C:\Windows\system32>wfmgr get-config
Unified Write Filter Configuration Utility version 0.0.19044
Copyright (C) Microsoft Corporation. All rights reserved.

Current Session Settings

FILTER SETTINGS
  Filter state: ON
  Commit pending: NO
  Shutdown pending: NO
  HORN mode:

SERVICING SETTINGS
  Servicing State: OFF

OVERLAY SETTINGS
  Type: RAM
  Maximum size: 1024 MB
  Warning Threshold: 512 MB
  Critical Threshold: 1024 MB
  Read Only Media: OFF
  Freespace Passthrough: OFF
  Persistent: OFF
  Reset Mode: N/A
  Reset Saved Mode: N/A

VOLUME SETTINGS
  Volume 95f58bae-9f88-4051-a3ab-8a79ced8cbea [C:]
  Volume state: Protected
  Volume ID: 95f58bae-9f88-4051-a3ab-8a79ced8cbea
  Swapfile: 0 MB

File Exclusions:
Current Session Exclusions for Volume 95f58bae-9f88-4051-a3ab-8a79ced8cbea [C:]
*** No exclusions

REGISTRY EXCLUSIONS
*** No exclusions

Next Session Settings

FILTER SETTINGS
  Filter state: ON
  Commit pending: N/A
  Shutdown pending: N/A
  HORN mode: N/A

SERVICING SETTINGS
  Servicing State: OFF

OVERLAY SETTINGS
  Type: RAM
  Maximum size: 1024 MB
  Warning Threshold: 512 MB
  Critical Threshold: 1024 MB
  Read Only Media: OFF
  Freespace Passthrough: OFF
  
```

4. Input "wfmgr get-config" and press the [Enter] key. View current setting status.

Item	Display	Meaning
Filter state	OFF	Disabling the UWF
	ON	Enabling the UWF
Volume state	Un-protected	Invalid Volume Protect
	Protected	Effective Volume Protect

4. Set to factory default values

This section explains the preinstalled type's various factory default settings. You can reset these settings unless their values are specially designated.

1. Panel

The initial screen resolution will be the recommended resolution for the connected display. To change screen settings (resolution, color, refresh rate, rotation, etc.), please use the Windows [Display settings].

2. Ethernet settings


The preinstalled type's product Ethernet display and the OS Ethernet recognition status are shown below.

Product Ethernet display	OS Ethernet recognition
LAN 1	Ethernet
LAN 2	Ethernet 2
LAN 3 *1	Ethernet 3


*1: These may not be installed depending on the product configuration.

The LAN recognized names are set to match the language selected during initial Windows setup. The above are the LAN recognized names when Japanese was selected during Windows setup. Even if you change the language in Windows later, the LAN recognized names will not change automatically. If you want to display the LAN recognized names to match the language, you need to change the settings manually.

If changing the network settings, select [Control Panel] → [All Control Panel Items] → [Network and Sharing Center], and you can set them in [Change adapter settings]. The preinstalled type's factory default network settings are shown below.

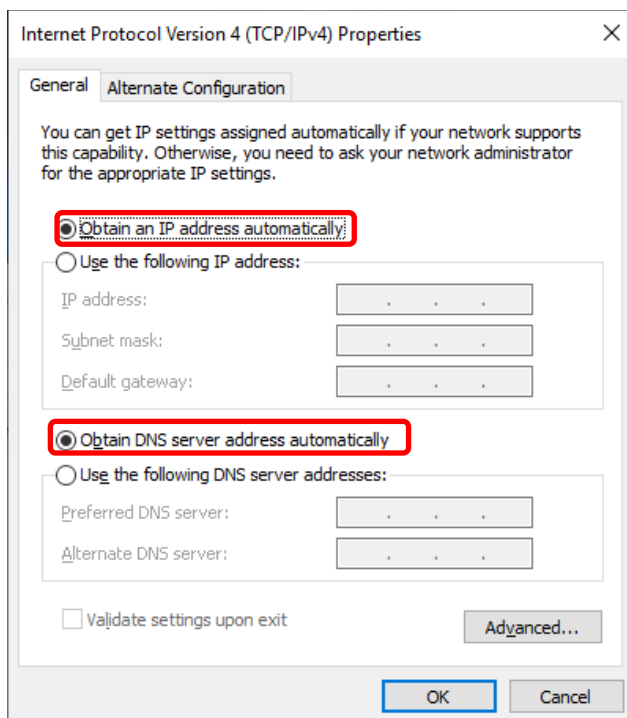

[Internet Protocol Version 4]
IP address : automatically
DNS : automatically

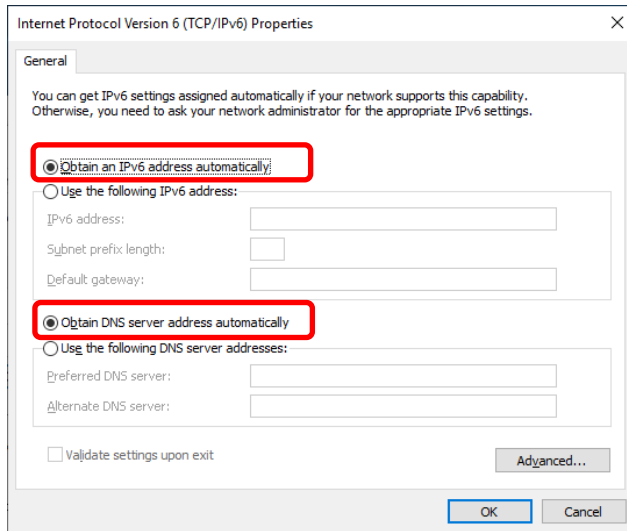


[Internet Protocol Version 6]

IP address : automatically

DNS : automatically


3. Serial Port Settings

The preinstalled type's product SERIAL display and OS SERIAL recognition status are shown below.

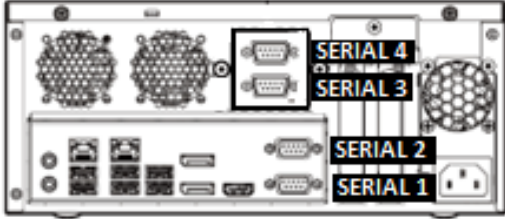Product SERIAL display	Product SERIAL	OS SERIAL recognition
	SERIAL 1	COM1
	SERIAL 2	COM2
	SERIAL 3 *2	COM3
	SERIAL 4 *2	COM4

*2: These may not be installed depending on the product configuration.


Use Device Manager to check the port settings.

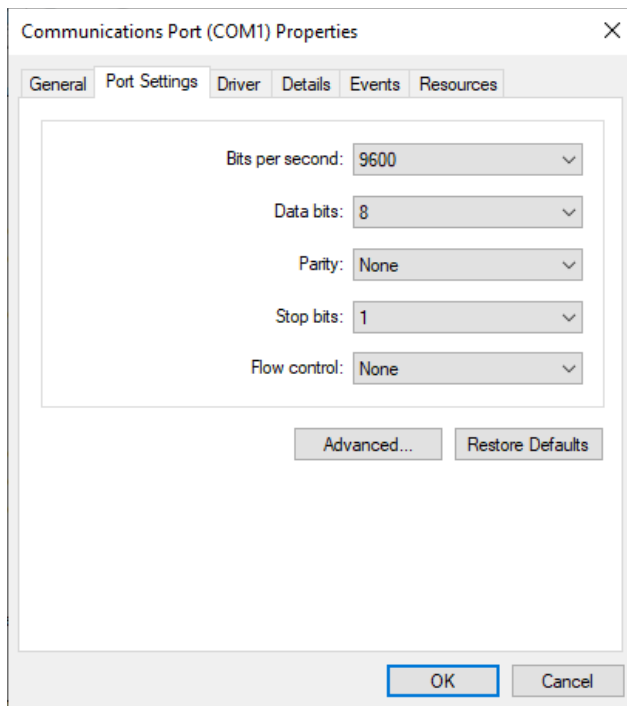


Item	Settings
Bits per second	9600
Data bits	8
Parity	None
Stop bits	1
Flow control	None

4. Optional power settings

This section explains the factory settings for power options.

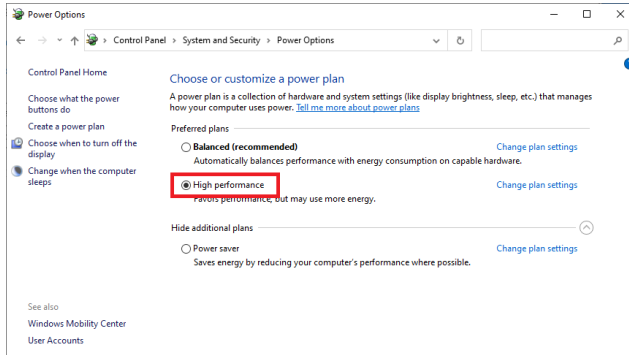

Power plan : High performance

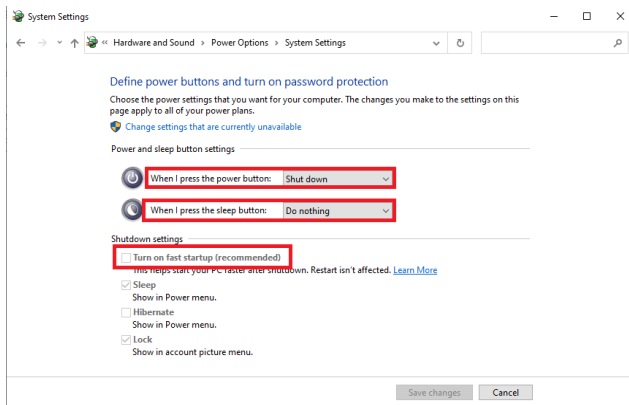


Power and sleep button settings

When I press the power button : Shut down

When I press the sleep button : Do nothing

Shutdown settings

Turn on fast startup (recommended) : Uncheck

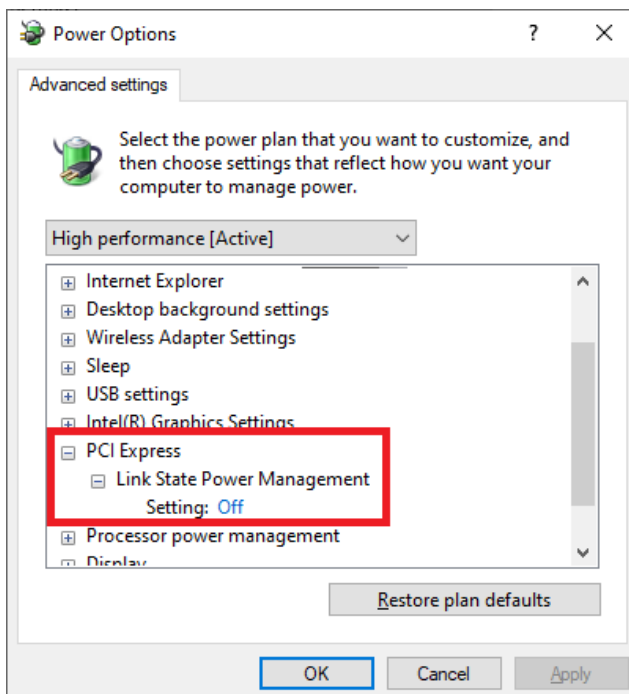

Advanced settings


PCI Express-Link State Power Management

Setting : Off


5.Changing the language

The preinstalled type supports English, Japanese, Korean and Simplified Chinese.


The following explains how to manually change the language settings. As an example we will explain the procedure for switching from English to Japanese.

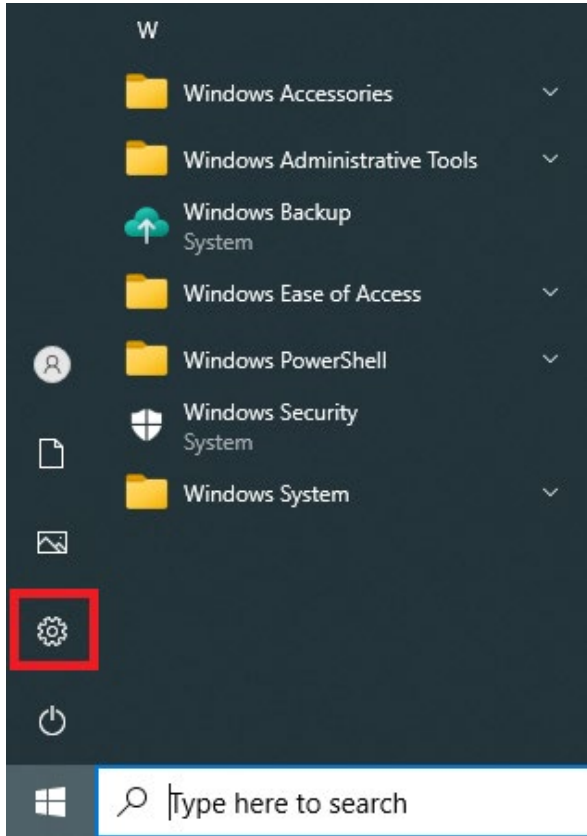


1. On the [Start] menu, click [Settings].

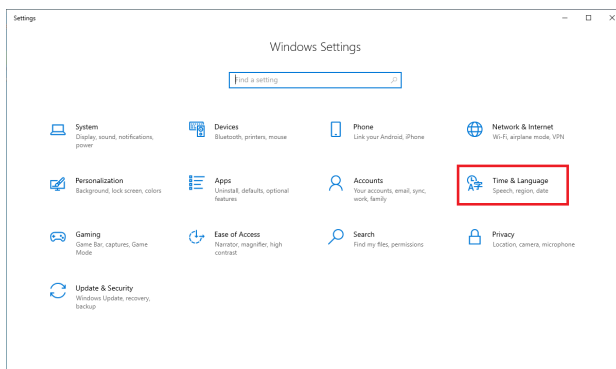


2. Click [Time & Language].

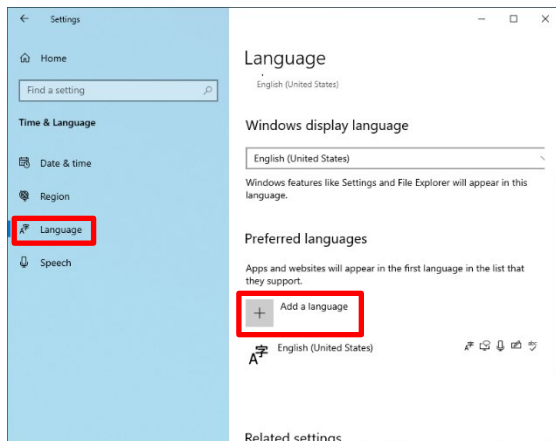


3. Click [Language], and then select [Add a language].

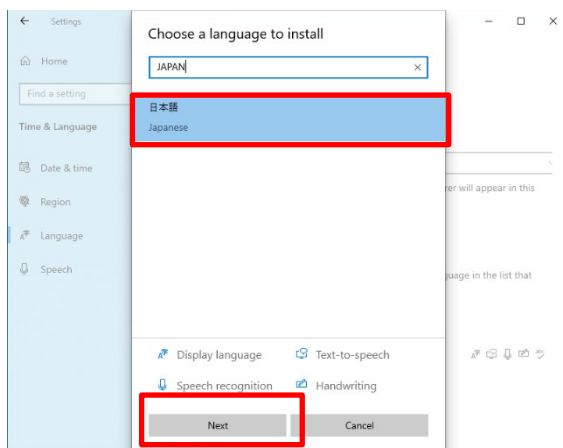


4. Input "JAPAN" in the textbox, and a list will appear below. Select [日本語 (Japanese)], and then click [Next].

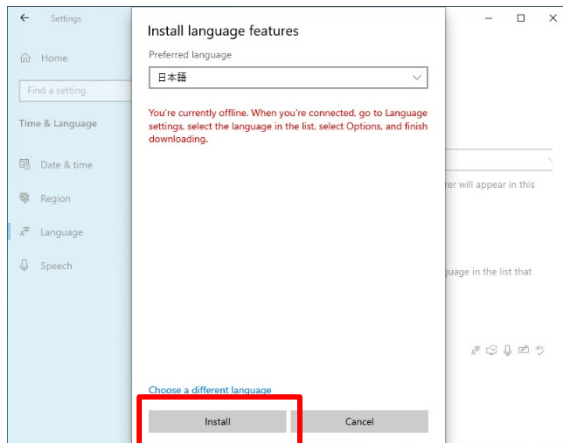

5. The language function's installation screen will be displayed, but it is already installed. Click [Install].

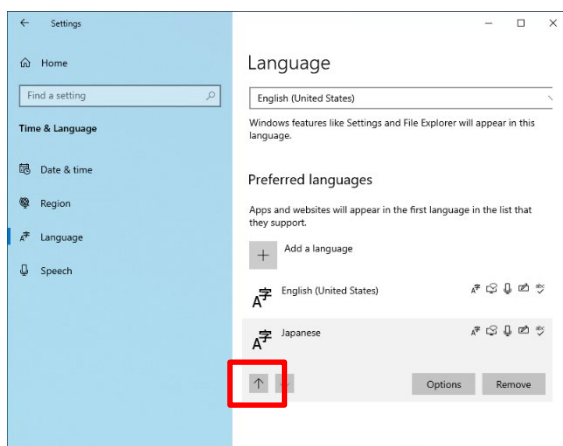

6. Japanese is added, so select that item. In order to change the current language from English (United States) to Japanese, click [↑].

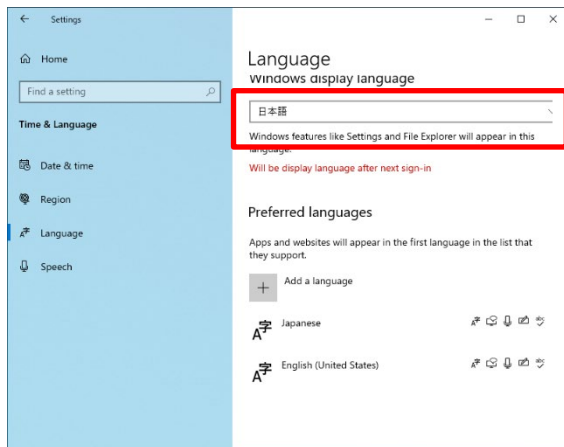

7. The Windows display language will be set to Japanese. Restart Windows.


In order to change the display language during startup and shutdown to Japanese, you also need to perform the following settings.



8. In Control Panel, click [時計と地域 (Clock and Region)], then click [地域 (Region)]. The [地域 (Region)] properties screen appears. Select the [管理 (Administrative)] tab and click on [設定のコピー(O)…] (Copy settings…).




9. After checking both the [ようこそ画面とシステムアカウント (Welcome screen and system accounts)] and [新しいユーザーアカウント (New user accounts)] boxes, click [OK].

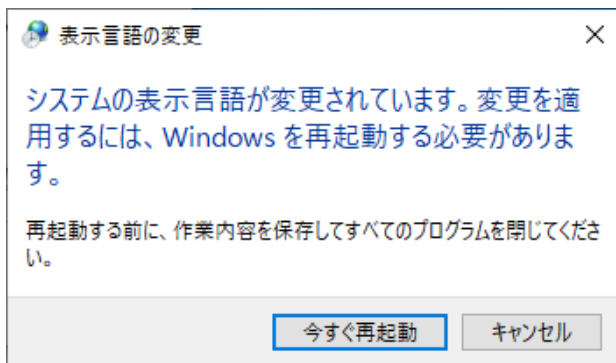


10. Confirm the contents, then click [今すぐ再起動 (Restart now)] to restart the system and complete the settings.

6.Windows Update

You can install the correction program (QFE) in [Update & Security].

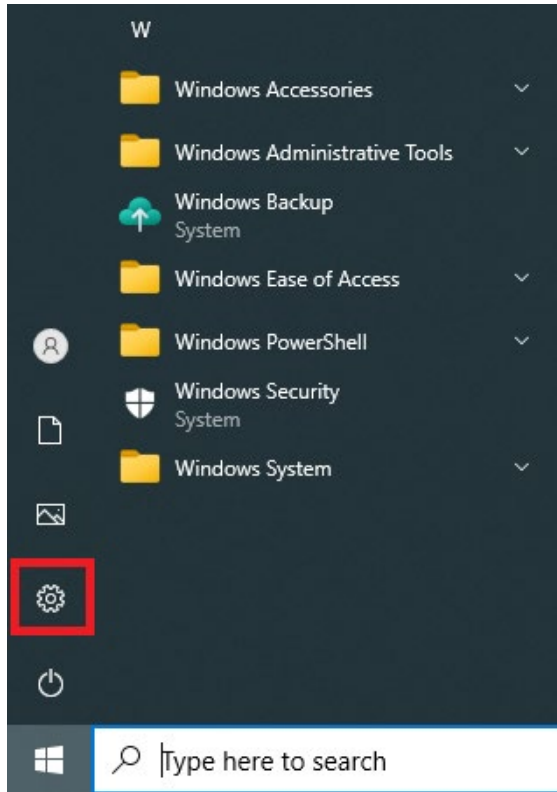

 1. On the [Start] menu, click [Settings].



2. Click [Update & Security].

CAUTION

Since the StartComponentCleanup task is disabled at the time of shipment, old components etc. are not automatically deleted. If you need to delete it, enable the task or run the command below.

Dism.exe /online /Cleanup-Image /StartComponentCleanup

(Run from an administrator command prompt.)

(Reference)

<https://learn.microsoft.com/en-us/windows-hardware/manufacture/desktop/clean-up-the-winsxs-folder?view=windows-10>

7.CONTEC Solution Manager

1. Overview

CONTEC provides not only functions installed with this product such as the RAS function to secure reliability and the UWF function providing the OS, but also setting tools that allow you to use CONTEC products more smoothly and a library to control the functions listed below.

- Hardware monitor
- Watchdog timer
- UWF operations and status monitoring

For detailed instructions, see the help file. The following describes how to consult the help file.

[Start] menu → CONTEC Manager → Help

CONTEC Solution Manager updates without future notice through the new product's response, improvements, etc. For this reason, the version installed in the preinstalled version may be out of date in some cases. Confirm the latest version online.

Download it from the following URL.




Download

<https://www.contec.com/download/>

(*) Reliability Availability and Serviceability : Support functions for stable system operations


2. How to start

CONTEC Solution Manager is run from the service application (CoRasSvr.exe) when you sign in to Windows and remains in the task tray. The following icon will appear in the task tray. Move the cursor over the icon and double-click on it to display the properties screen. You can also show the properties screen by pressing <Alt> and <Esc> at the same time.

Task tray icon	Meaning
	UWF disabled status
	UWF enabled status
	UWF function disabled status (The hardware monitor, etc., with the exception of the UWF function, can be used)

3. Properties screen


*The following images may differ from the actual product.

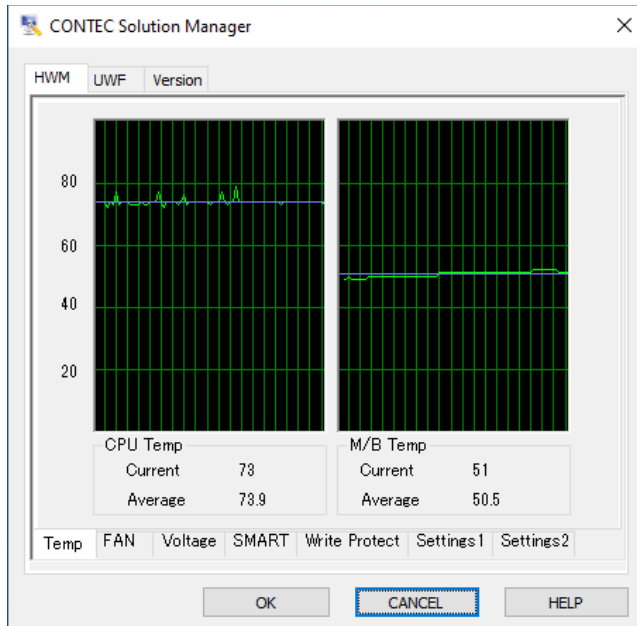

Monitor hardware status such as the CPU temperature, the M/B temperature and so on. If it exceeds the set threshold, the set alarm action will be activated.

Alarm actions that can be set :

- 1.None (Initial settings)
- 2.Popup Message
- 3.Reboot
- 4.Shutdown
- 5.Designated application

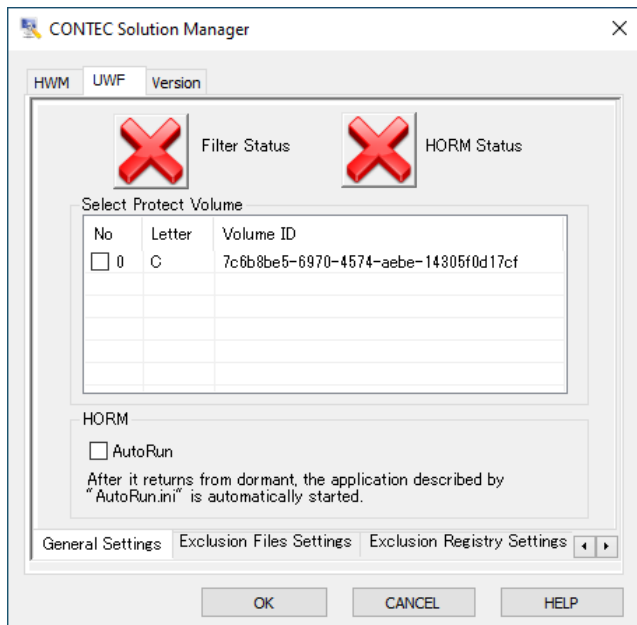

Change settings such as enabling/disabling UWF. Monitors the usage status of the overlay region when UWF is enabled.

If it exceeds the set threshold, the set alarm action will be activated.


Alarm actions that can be set:



- 1.None (Initial settings)
- 2.Popup Message
- 3.Reboot
- 4.Shutdown
- 5.Designated application


Icon	Settings
	Disabled status
	Enabled status
	Unable to set

4. UWF settings

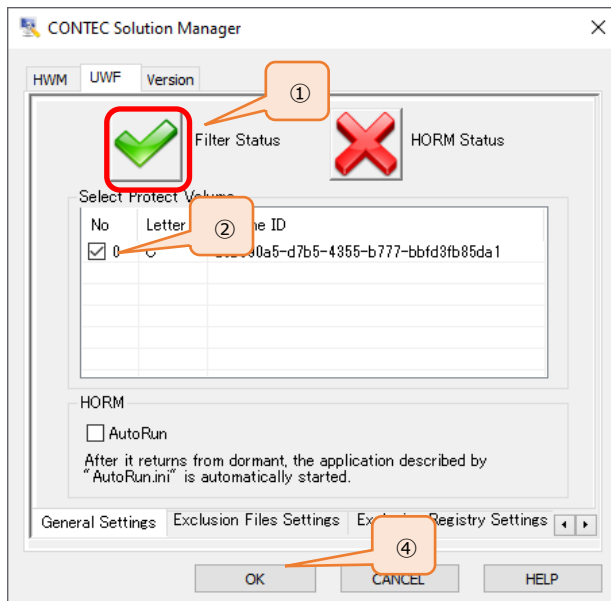The following explains the method for setting write protection for the C drive.



- ① Click [] and set to [].
- ② Tick the volume [C] targeted for protection.
- ③ Click the [OK] button.

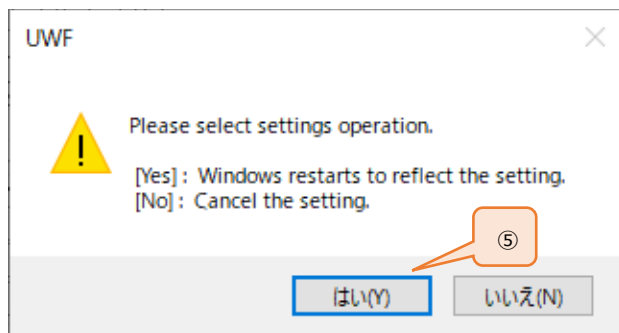

- ④ Click the [OK] button.
The settings will be enabled once you restart Windows.

8. Trellix Security

Trellix Security pre-installed models come with whitelist security software installed. Register only applications that may be activated in the list and control application launch based on that list. In the general blacklist method, definition files increase over time, whilst with the whitelist method, you can operate without increasing the number of lists or updating the definition file.

◆ About the command

It is used at the command prompt (administrator).

1. Confirm system protection status

When confirming the state of the operation mode (Enable / Disable / Update / Observe) and the state of the whitelist, confirm with the following command:

sadmin status

2. Create a whitelist

It is also possible to register specific volumes individually in the whitelist. For example, to register all program files on volume C to the whitelist, use the following command:

sadmin so c:

- "so" is an abbreviation of "solidify"
- When "c:" is omitted, the entire system is targeted.

3. Enable system protection

Just by registering a file on the system in the whitelist, it is not yet valid, so activate it using the following command.

sadmin enable

- It is enabled by the service restart (McAfee Solidifier Service), but the memory protection function will be effective after restarting the system.

4. Disable system protection

To disable it, use the following command.

sadmin disable

- Disable is actually effective after restarting the system.

5. Manual update start (Update mode)

Enter the Update mode from the Enable mode with the following command.

sadmin bu

6. Manual update end (Update mode)

The following command returns from the Update mode to the Enable mode.

sadmin eu

For detailed instructions on how to use it, please see the URL below.

<https://docs.trellix.com/bundle/application-change-control-8.4.x-product-guide-windows/page/UUID-7cce54f5-042f-e050-f50a-c0d64f7405d6.html>

Power Failure Protection

This product is equipped with "Power Failure Protection" function that prohibits writing onto storage in the event of a power failure. Along with the UWF functions, file system damage caused by sudden power failure can be avoided.

1.About Power Failure Protection

The Power Failure Protection needs to be used along with the UWF function. For this reason, the following tables include enabling the UWF functions. Use them as a reference to check the general flow when using the Power Failure Protection.

This function cannot be used when a RAID configuration is in place.

1. When the Power Failure Protection is used

1	Factory default	UWF functions: Disabled Write Protect functions: Disabled
2	Windows initial setup	Follow the procedure described in [1. Windows setup (page17)] for the initial setup of Windows (the language choice etc.). UWF functions: Disabled Write Protect functions: Disabled
3	User environment setup	Change the settings of Windows or set up applications. UWF functions: Disabled Write Protect functions: Disabled
4	Enabling the UWF function	Follow the procedure described in [7. CONTEC Solution Manager (Page39)] and set the UWF. UWF functions: Disabled Write Protect functions: Disabled
5	Restarting Windows	The UWF function will be enabled once you restart Windows. UWF functions: Enabled Write Protect functions: Disabled
6	Shutting down Windows	Shut down Windows. UWF functions: Enabled Write Protect functions: Disabled
7	Enabling the Write Protect function	Enable the Write Protect function. *1 WF functions: Enabled Write Protect functions: Enabled
8	Starting Windows.	Start Windows operation. UWF functions: Enabled Write Protect functions: Enabled

2. When the Power Failure Protection is not used

1	Disabling Write Protect function	Disable the Write Protect functions. *1 UWF functions: Enabled Write Protect functions: Disabled
2	Disabling the UWF function	Start Windows and follow the procedure described in [7. CONTEC Solution Manager (Page39)] to set the UWF. UWF functions: Enabled Write Protect functions: Disabled
3	Restarting Windows	The UWF function will be disabled once you restart Windows. UWF functions: Disabled Write Protect functions: Disabled

*1 Follow the steps listed below to change the Write Protect function settings of storage.

1	Turn on the power supply of PC, and immediately press [DEL] key or [ESC] key to activate BIOS settings screen (Aptio Setup Utility). Select [Chipset] - [South Bridge] - [SATA Configuration] in that order. Change the "Write Protect" settings.		
	Item	Option	Description
	Write Protect	Disabled / Enabled	The Hardware Write Protect can be enabled.
2	Press [F4] key, select [Save & Exit Setup]. Please select [Yes] and press [ENTER] key.		

Please check the following points listed in CAUTION beforehand, then, use the Power Failure Protection. For further caution or warning details, see the Reference Manual.

CAUTION

- The following UWF functions will no longer be available once you enable the Write Protect for a drive.
 - Commit function
 - Exclude writing function (file, folder, and registry)
 - Filter setting function for each drive

(Supplemental explanations)

Write Protect function is set on a per-storage basis.

When using one storage for several partitions (for C drive and D drive, etc.),

set the UWF protect for all partitions first, then, enable the Write Protect function.

- To keep the log file information of the drive with Write Protect enabled, change the setting to write the information onto a different storage.

An example)

Disable both Write Protect function and UWF, then, change the settings by following the instruction.

Run "eventvwr.exe" on the command prompt to start the event viewer.

Change the log output path from the System property to as listed below:

From [%SystemRoot%\System32\winevt\Logs\System.evtx] to
[d:\winevt\Logs\System.evtx]

Recovery Method

This chapter explains how to recover the OS in the event that it is unable to start in the preinstalled type.

1.Preparations

This article explains how to perform OS recovery using a DVD-ROM drive. Please prepare the following equipment.

- The product itself
- Monitor
- USB Keyboard
- USB Mouse
- USB DVD-ROM Drive (If the product does not have an optical drive)
- Provided Recovery Media (You require recovery media, contact your retailer.)

Please check the following points and connect the device.

CAUTION

- Before using a recovery media, be sure to read the license agreements (END USER LICENSE AGREEMENT about respective OS and Easy Restore license agreement). You can use this recovery media only if you agree to the license descriptions.
 - Use of the recovery media is allowed only for the purpose of restoring preinstalled OS. Using the media for other purposes than OS recovery is prohibited.
 - The content of the silicon disk returns to the state when our company is shipped by restoring it by recovery media. Take the backup in important data beforehand.
 - Remove the connected disks if that are not composed in the pre-installed type from the body.
 - Remove the USB storage device if it is connected to the body.
-


2.Procedure

Before proceeding, connect a display, USB keyboard, USB mouse, and USB DVD-ROM drive (if the product does not have an optical drive) to the product.


1. BIOS settings

Please set recovery media to a DVD-ROM drive, and connect with PC.

Turn on the power supply of PC and Press [DEL] key or [ESC] key immediately after turning on the power, activating Aptio Setup Utility. Recovery Procedures.

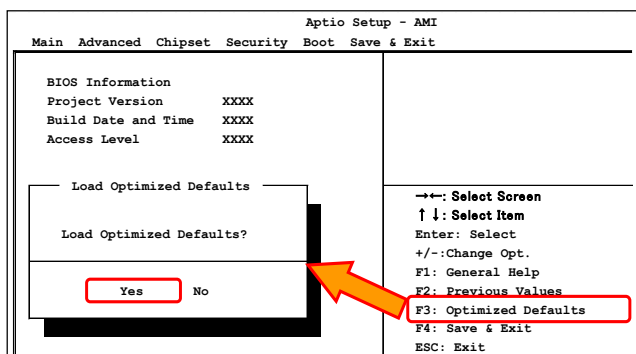


1. Press [F3] key, select [Load Optimized Defaults]. Please select [Yes] and press [ENTER] key.

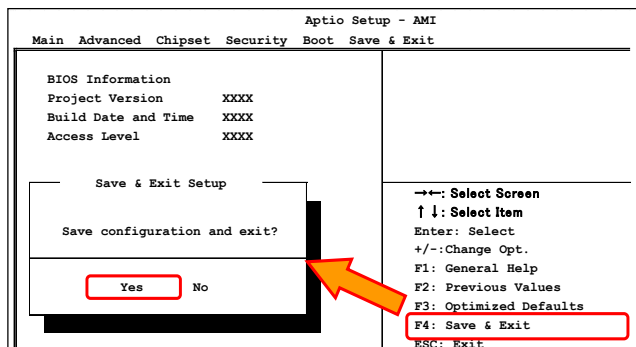

2. Press the [F4] key, select [Yes] from [Save & Exit Setup], and press the [ENTER] key to reboot.

Immediately after rebooting, press the [DEL] or [ESC] key on the BIOS boot screen.

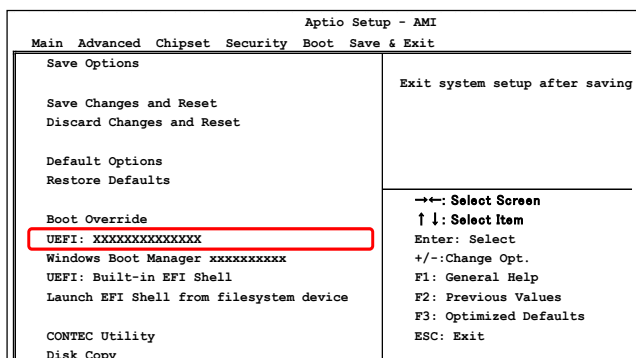

3. Select the [Save & Exit] menu. Press the [↓] key, select "UEFI: DVD-ROM drive" displayed in Boot Override, and press the [Enter] key. The system will restart and UEFI boot will be performed from the selected DVD-ROM drive. Proceed to "2. OS installation".

2. OS installation

UEFI boot will be performed from the DVD-ROM drive, and after a while Windows PE will start.

```
[!!! WARNING !!!]
Initialize Storage.
Are you Sure? [Y/N]
```

1. When you receive the confirmation message, please press [Y] key and [ENTER] key. (If you do not continue the recovery, press [N] key.)

```
[!!! WARNING !!!]
The second storage was found.
Initialize the storage in NTFS format ? [Y/N] > _
```

2. If two storage devices are connected to the main unit, the message shown on the left will be displayed. To format, enter the [Y] key and press the [ENTER] key.

```
CImage Tool for Windows
Copyright<C> 20XX CONTEC CO., LTD.
Version X.X.X.X

[xxx%] Applying Progress. xx:xx remaining.
```


3. HDD/SSD initialization and recovery processing will be performed automatically.

```
*****
Remove the System Restoration Disk
Press any key to shutdown
*****
```

4. When the recovery process is complete, the screen shown on the left will be displayed. Remove the recovery media from the DVD-ROM drive and press the [Enter] key. The system will then shut down.

3. Start OS

Turn the power back on. The screen of the left figure is displayed after several times reboot.

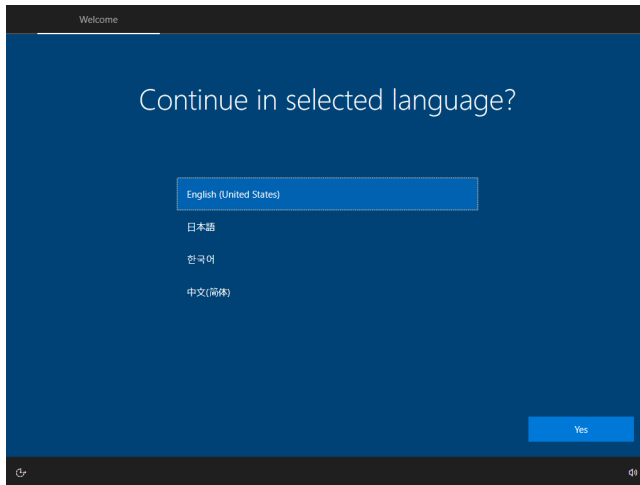

Perform Windows setup following the setup procedure in this manual.

Customer Support and Inquiry

CONTEC provides the following support services for you to use CONTEC products more efficiently and comfortably.


1.Services

CONTEC offers the useful information including product manuals that can be downloaded through the CONTEC website.

Download

<https://www.contec.com/download/>

You can download updated device driver, firmware, and differential manuals in several languages. Membership registration (myCONTEC) is required to use the services.

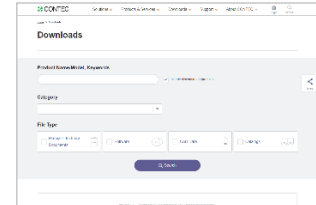

Revision History

MONTH YEAR	Summary of Changes
September 2024	The First Edition
February 2025	Added Trellix Security pre-installed type

Copyright

Copyright 2024 CONTEC CO., LTD. ALL RIGHTS RESERVED.

- No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.
- The information contained in this document is subject to change without prior notice.
- Should you notice an omission or any questionable item in this document, please feel free to notify your retailer.
- Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using this product.

Trademarks

Intel, Intel®, Intel Atom® Core™, and Intel® Celeron are registered trademarks of Intel Corporation in the United States and other countries. Microsoft, Windows and Intel® Celeron are trademarks of Microsoft Corporation in the United States and other countries. Other brand and product names are trademarks of their respective holder.

CONTEC CO., LTD. 3-9-31, Himesato, Nishiyodogawa-ku, Osaka 555-0025, Japan

<https://www.contec.com/>

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.

VPC-720 Manual for OS Pre-installed Type (Windows 10 IoT Enterprise 2021 LTSC)

NA10251 (LXDU192) 02252025_rev2 [09302024]

February 2025 Edition