100KSPS 16-bit 8ch Analog Output Board for PCI Express(Low Profile)

AO-1608L-LPE



* Specifications, color and design of the products are subject to change without notice.

This product is a Low Profile PCI Express bus-compliant interface board used to provide an analog signal output function on a PC.

This product is multifunction type with 16-bit analog output 8 channels, digital I/O and counter function.

This product carries buffer memory for 1K of data, allowing sampling to be performed in a variety of trigger / clock conditions

Windows/Linux driver is bundled with this product. Possible to be used as a data recording device for MATLAB and LabVIEW, with dedicated libraries.

Features

High precision analog output 8 channels, each 4 channels for digital I/O, counter 1 channel

This product has analog output (10μ sec, 16-bit, 8 channels), analog output control signal (LVTTL level 3 channels), digital I/O (each 4 channels for LVTTL level), counter (32-bit, LVTTL level 1 channel).

The start/end of sampling can be controlled by software, an external trigger, etc.

You can select from software, an external trigger to control the start of sampling. You can select from completion of sampling for a specified number of sessions, an external trigger or software to control forcibly the end of sampling. The sampling cycle can be selected from the internal clock or an external clock.

Safety design to adjust output voltage to 0V when power supply is turned on

To prevent the unstable voltage and the connected device of D/A converter from fault and malfunctions when the power supply is turned on, the circuit is designed to adjust output voltage of the analog output to 0V.

Equipped with buffer memory (1K data) that can be used in the FIFO or RING format

The block contains buffer memory (1K data) that can be used in the FIFO or RING format. This allows for background analog output that does not depend on the operation status of the software or PC.

Digital filter function included to prevent misdetection due to chattering on external signals

A digital filter is included to prevent misdetection due to chattering on the control signal (external trigger input signal, sampling clock input signal, etc.), digital input signal and counter input signal.

(Except from external clock input signal and counter gate signal)

Functions and connectors are compatible with PCI compatible board DA16-8(LPCI)L

The functions same with PCI compatible board DA16-8(LPCI)L are provided.

In addition, as there is compatibility in terms of connector shape and pin assignments, it is easy to migrate from the existing system.

Support for both of low-profile and standard PCI slots (interchangeable with a bundled bracket)

This product has each bracket for both low-profile size slot and standard size slot. If you wish to mount this product in a standard size slot, replace this with the standard size bracket.

Software-based calibration function

Calibration of analog output can be all performed by software. Apart from the adjustment information prepared before shipment, additional adjustment information can be stored according to the use environment.

Windows/Linux compatible driver libraries are attached.

Using the attached driver library API-PAC(W32) makes it possible to create applications of Window/Linux. In addition, a diagnostic program by which the operations of hardware can be checked is provided.

MATLAB and LabVIEW is supported by a plug-in of dedicated library VI-DAQ.

Using the dedicated library MATLAB and VI-DAQ makes it possible to make a LabVIEW application.


AO-1608L-LPE

Specification

Item	Specification			
Analog output				
Isolated specification	Unisolated			
Number of output channels	8ch			
Output range	Bipolar ±10V			
Absolute max. output	±3mA			
currency				
Output impedance	1Ω or less			
Resolution	16bit			
Non-Linearity error *1	±5LSB			
Conversion speed	10μ sec			
Buffer memory	1k Word			
Conversion start trigger	Software / external trigger			
Conversion stop trigger	Number of sampling times / external trigger/software			
External start signal	LVTTL-level (Rising or falling edge can be selected by			
	software)			
	Digital filter (1μ sec can be selected by software)			
External stop signal	LVTTL-level (Rising or falling edge can be selected by			
	software)			
	Digital filter (1μ sec can be selected by software)			
External clock signal	LVTTL-level (Rising or falling edge can be selected by			
	software)			
1	Digital filter (1μ sec can be selected by software)			
rigital I/O				
Number of input channels	Unisolated input 4ch (LVTTL-level positive logic)			
Number of output channels	Unisolated output 4ch (LVTTL-level positive logic)			
Counter	T			
Number of channels	1ch			
Counting system	Up count			
Max. count	FFFFFFFh (Binary data,32bit)			
Number of external inputs	2 LVTTL-level (Gate/Up)/ch			
	Gate (High level), Up (Rising edge)			
Number of external outputs	LVTTL-level Count match output (positive logic, pulse output)			
Response frequency	10MHz (Max.)			
common section				
I/O address	64 ports			
Interruption level	Errors and various factors, One interrupt request line as IN			
Connector	10250-52A2JL[3M]			
Power consumption (Max.)	3.3VDC 300mA 12VDC 300mA			
Operating condition	0 - 50°C, 10 - 90%RH (No condensation)			
Bus specification	PCI Express Base Specification Rev. 1.0a x1			
Dimension (mm)	121.69 (L) x 67.90 (H)			
Weight	70g			
Standard	VCCI Class A, CE Marking (EMC Directive Class A, RoHS			
The non-linearity error mea	Directive), UKCA			

¹ The non-linearity error means an error of approximately 0.1% occurs over the maximum range at 0°C and 50°C ambient temperature.

Board Dimensions



Support Software

Windows version of analog I/O driver API-AIO(WDM)

The API-AIO(WDM) is the Windows version driver library software that provides products in the form of Win32 API functions (DLL). Various sample programs such as Visual Basic and Visual C++, etc and diagnostic program useful for checking operation is provided.

You can download the updated version from the CONTEC's Web site (http://www.contec.com/apipac/). For more details on the supported OS, applicable language and new information, please visit the CONTEC's Web site.

Linux version of analog I/O driver API-AIO(LNX)

The API-AIO(LNX) is the Linux version driver software which provides device drivers (modules) by shared library and kernel version. Various sample programs of gcc are provided. You can download the updated version from the CONTEC's Web site. For more details on the supported OS, applicable language and new information, please visit the CONTEC's Web site.

Data Acquisition library for MATLAB ML-DAQ (Available for downloading (free of charge) from the CONTEC web site.)

This is the library software which allows you to use our analog I/O device products on MATLAB by The MathWorks. Each function is offered in accordance with the interface which is integrated in MATLAB's Data Acquisition Toolbox. For more information, please visit CONTEC's website.

Data acquisition VI library for LabVIEW VI-DAQ (Available for downloading (free of charge) from the CONTEC web site.)

This is a VI library to use in National Instruments LabVIEW. VI-DAQ is created with a function form similar to that of LabVIEW's Data Acquisition VI, allowing you to use various devices without complicated settings.

For more information, please visit CONTEC's website.

Cable & Connector

Cable(Option)

Shield Cable with 50-Pin Mini-Ribbon Connectors at either Ends

: PCB50PS-0.5P (0.5m)

: PCB50PS-1.5P (1.5m)

Shield Cable with 50-Pin Mini-Ribbon Connector at one End

: PCA50PS-0.5P (0.5m)

: PCA50PS-1.5P (1.5m)

Accessories

Accessories (Option)

Screw Terminal Unit (M3 x 50P) : EPD-50A *1*2

- *1 PCB50PS-0.5P or PCB50PS-1.5P optional cable is required separately.
- *2 "Spring-up" type terminal is used to prevent terminal screws from falling off.
 * Check the CONTEC's Web site for more information on these options.

Packing List

Board [AO-1608L-LPE] ...1
First step guide ... 1
Disk *1 [API-PAC(W32)] ...1
Standard-sized bracket...1
Product Registration Card & Warranty Certificate...1
Serial software and User's Guide...1
Serial number label...1


*1 Driver software and User's Guide

AO-1608L-LPE 2

How to connect the connectors

Connector shape

To connect an external device to this board, plug the cable from the device into the interface connector (CN1) shown below.

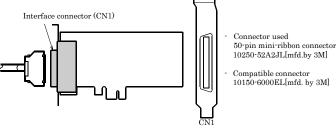

Please refer to page 2 for more information on the supported cable and accessories.

Connector Pin Assignment

Pin Assignments of Interface Connector(CN1)

Pin Assignment	S OI IIIL	en	ace	CU	אוווופ	;U	OI (CIV I)
Analog Output 02	AO 02	50				25	AO 00	Analog Output 00
Analog Ground (for AO)	AGND	49				24	AGND	Analog Ground (for
		49				24		AO)
Analog Output 03	AO 03	48				23	AO 01	Analog Output 01
Analog Ground (for AO)	AGND	47				22	AGND	Analog Ground (for AO)
Analog Output 06	AO 06	46				21	AO 04	Analog Output 04
Analog Ground (for AO)	AGND	45				20	AGND	Analog Ground (for AO)
Analog Output 07	AO 07	44				19	AO 05	Analog Output 05
Analog Ground(for AO)	AGND	43				18	AGND	Analog Ground (for AO)
	N.C.	42			<u>, </u>	17	N.C.	
Analog Ground (for AO)	AGND	41	50 4		25	16	AGND	Analog Ground (for AO)
	N.C.	40				15	N.C.	
Analog Ground (for AO)	AGND	39				14	AGND	Analog Ground (for AO)
	N.C.	38				13	N.C.	
Analog Ground (for AO)	AGND	37				12	AGND	Analog Ground (for AO)
	N.C.	36				11	N.C.	
Analog Ground (for AO)	AGND	35				10	AGND	Analog Ground (for AO)
Output Control External Sampling Stop Trigger Input	OCESSPI	34	26-		_1	9	OCESST I	Output Control External Sampling Start Trigger Input
Output Control External Sampling Clock Input	OCESCKI	33				8	DGND	Digital Ground
Digital Output 00	DO 00	32				7	DI 00	Digital Input 00
Digital Output 01	DO 01	31				6	DI 01	Digital Input 01
Digital Output 02	DO 02	30				5	DI 02	Digital Input 02
Digital Output 03	DO 03	29				4	DI 03	Digital Input 03
Digital Ground	DGND	28				3	DGND	Digital Ground
Counter Clock Input	CNT CKI	27				2	CNT GCI	Counter Gate Control Input
Reserved (Counter Input)	Reserved	26				1	CNT CPO	Counter Count-up Pulse Output

Analog output signal. The numbers correspond to channel	
S.	
n analog ground for analog I/O signals.	
trigger input for starting analog output sampling.	
trigger input for stopping analog output sampling.	
sampling clock input for analog output.	
put signal.	
utput signal.	
ntrol input signal for counter.	
p clock input signal for counter.	
output signal.	
n digital ground for digital I/O signals, external	
nputs, external sampling clock inputs, and counter	
als.	
d pin.	
ection to this pin.	

⚠ CAUTION

Do not connect any of the outputs and power outputs to the analog or digital ground. Neither connect outputs to each other. Doing either can result in a fault.


If analog and digital ground are shorted together, noise on the digital signals may affect the analog signals. Accordingly, analog and digital ground should be separated. Leave "Reserved" pins unconnected. Connecting these pins may cause a fault in the board.

Analog Output Signal Connection

This section shows how to connect the analog output signal by using a flat cable or a shielded cable.


The following figure shows an example of flat cable connection. Connect the signal source and ground to the CN1 analog output.

Analog Output Connection (Flat Cable)



The following figure shows an example of shield cable connection. Use shielded cable if the distance between the signal source and board is long or if you want to provide better protection from noise. For each analog input channel on CN1, connect the core wire to the signal line and connect the shielding to ground.

Analog Output Connection (Shield Cable)



*1 The number of channels depends on each board. The AO-1608L-LPE has 8 channels.

⚠ CAUTION

When the power supply is turned on, the output voltage of all channels becomes 0 V.

If the board or the connected wire receives noise, or the distance between the board and the target is long, data may not be outputted properly.

For analog output signal, the current capacity is ±3mA (Max.). Check the specification of the connected device before connecting the board.

Do not short the analog output signal to analog ground, digital ground, and/or power line. Doing so may damage the board.


Do not connect an analog output signal to any other analog output, either on the board or on an external device, as this may cause a fault on the board.

AO-1608L-LPE 3


Digital I/O signals, Counter signals and Control signals Connection

The following sections show examples of how to connect digital I/O signals, counter I/O signals, and other control I/O signals (external trigger input signals, sampling clock input signals, etc.). All the digital I/O signals and control signals are TTL level signals.

Digital Input Connection



Digital Output Connection




About the counter input signal control

Counter Gate Control Input (see page 3, Connector Pin Assignment") allows the input of the external clock for the counter to be enabled and disabled. This function can be used to control the input of the external clock for the counter. When the input level is "High", the input of the external clock for the counter is enabled. It is, on the other hand, disabled, when the input level is "Low". Note that when it is not connected, the input level is set to "High" as the board (card) pins are pulled up. Therefore, the input of the external clock for the counter is enabled when it is not connected.

⚠ CAUTION

- Do not short the output signals to analog ground, digital ground, and/or power line. Doing so may damage the board.
- Each input accepts 5V TTL signals.

Block Diagram

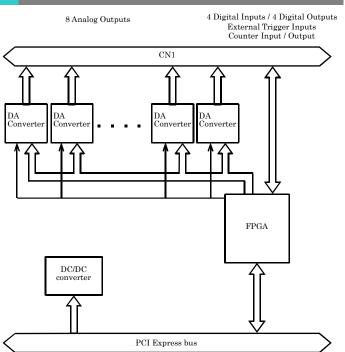

Difference from DA16-8(LPCI)L

The functions same with conventional product of DA16-8(LPCI)L are provided with the this product. In addition, as there is compatibility in terms of connector shape and pin assignments, it is easy to migrate from the existing system. So you can use the same operating procedures as DA16-8(LPCI)L.

There are some differences in specifications as shown below.

	AO-1608L-LPE	DA16-8(LPCI)L		
Power consumption	+3.3VDC 240 mA (Max.)	+5VDC 850 mA (Max.)		
Bus specification	PCI Express Base Specification Rev. 1.0a x1	PCI (32-bit, 33MHz, Universal key shapes supported)		
External start signal	LVTTL-level	TTL-level		
External stop signal	LVTTL-level	TTL-level		
External clock signal	LVTTL-level	TTL-level		
Digital Input/Output	LVTTL-level positive logic	TTL-level positive logic		
External Counter Input/Output	LVTTL-level	TTL-level		
Dimension (mm)	121.69(L) x 67.90(H)	121.69(L) x 63.41(H)		
Weight	70g	60g		