

Reference Manual Software

(Ubuntu 18.04.5 LTS)

Industrial Edge AI Computer

DX-U1100 Series

CONTENTS	
----------	--

Introduction.....	4
Notes Regarding Use.....	9
Setup procedures.....	13
Recovery/VersionUp Method.....	18
Boot SD Write Procedure.....	24
Operational Checks.....	30
Customer Support and Inquiry.....	58

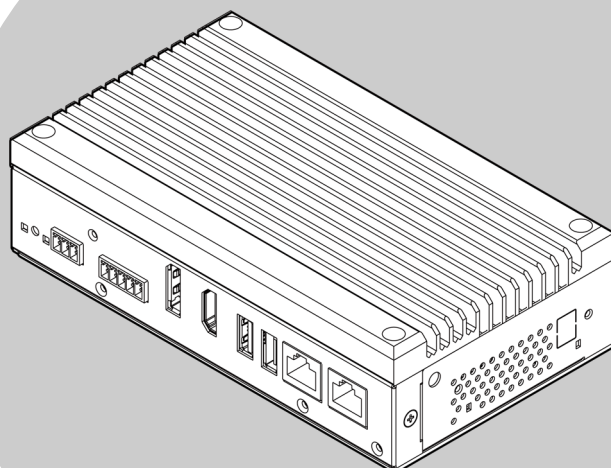


Table of Contents

Introduction4

1. About the Product.....5
2. Related Manuals.....6
 - ◆ Must Read the Following Manuals.....6
 - ◆ Download Manuals6
3. CONTEC Software License.....7

Notes Regarding Use9

1. Safety Information.....10
2. Handling Precautions.....11
3. Security Warning.....12
 1. Information Security Risks.....12
 2. Security Measures – e.g.....12

Setup procedures 13

1. Ubuntu Setup14

Recovery/VersionUp Method..... 18

1. Preparations.....19
2. Procedure.....20
 1. Setting the DIPSW and Turning On The Power Of The Product20
 2. Extracting Firmware and Performing Write Operations.....21
 3. Starting up OS.....23

Boot SD Write Procedure 24

1. Preparations.....25
2. Procedure.....26
 1. Preparing the SD Image26
 2. Writing the SD Image.....26
 3. OS Startup.....29

Operational Checks 30

1. Operating Environment.....31
 - ◆ Distribution.....31
 - ◆ Configuration.....31
2. List of Operational Checks32
 1. Operational Checks and Results.....32
3. Operational Check Details.....33
 1. Boot Mode Setting33
 - ◆ eMMC Boot33

Table of Contents

◆ SD Boot.....	34
2. Check the display	35
◆ HDMI Port	35
◆ DisplayPort.....	36
◆ HDMI + DisplayPort.....	37
3. HDMI Audio Operational Check	38
4. Storage Operational Check	39
◆ eMMC	39
◆ SD Card	40
◆ Using a SD Card as External Storage When Booting From eMMC	41
5. LAN Operational Check	42
◆ Network Settings	42
◆ SSH Operations.....	44
6. USB2.0 Port Operation Check	45
7. USB3.2 Gen1 (USB3.0) Port Operational Check.....	46
8. RAS Operational Check.....	47
◆ General-purpose I/O Operations	47
◆ POWER LED Operations	48
◆ Watchdog Timer Operations.....	48
◆ Hardware Monitor Operational Check.....	49
9. RTC Operational Check	50
10. CAMERA-IF Operational Check	51
11. 40-PIN HEADER Operational Check	53
◆ GPIO	54
◆ UART.....	55
◆ SPI.....	56
◆ I2C	57

Customer Support and Inquiry..... 58

1. Services	59
-------------------	----

Introduction

This will inform you of the information you need to know before using this product, such as an overview of the OS equipped with the preinstalled model, the overall configuration of this manual, the various manuals associated with this product, and so on.

1.About the Product

Ubuntu 18.04.5 LTS on the preinstalled model is based on the Sample Root Filesystem for Jetson Nano™ provided by NVIDIA®. CONTEC's preinstalled models perform customization to build the OS based on a configuration determined in advance.

In this manual, you will find basic information on the installed OS, as well as explanations of setup procedures and recovery procedures.

2.Related Manuals

The manuals related to the product are listed below.

Read them as necessary along with this document.

◆ Must Read the Following Manuals.

Name	Purpose	Contents	How to get
Product Guide	Must read this after opening the package.	This lists the product configuration and describes the precautions.	Included in the package (Printed matter)
Reference Manual	Read this when operating the product.	This describes the hardware aspects such as functions and settings.	 Download from the Contec website (PDF)
Pre-installed Model OS Manual (This manual)	Must read this after opening the package.	This explains basic OS information, setup procedures and recovery procedures.	 Download from the Contec website (PDF)

◆ Download Manuals

Download the manuals accordingly from the following URL.

Download

<https://www.contec.com/download/>

3.CONTEC Software License

SOFTWARE LICENSE AGREEMENT

PLEASE READ THIS SOFTWARE LICENSE AGREEMENT (the "Agreement") CAREFULLY BEFORE USING CONTEC'S SOFTWARE. THIS AGREEMENT SET FORTH TERMS AND CONDITIONS REGARDING THE LICENSE TO USE CONTEC'S SOFTWARE ONTO WHICH THE AGREEMENT IS ATTACHED (the "Software"). BY DOWNLOADING, INSTALLING OR USING THE SOFTWARE OR USING MACHINEARY ONTO WHICH THE SOFTWARE HAS BEEN INSTALLED, CUSTOMERS ARE AGREEING TO BE BOUND BY THE AGREEMENT. CUSTOMERS MAY NOT DOWNLOAD, INSTALL OR USE THE SOFTWARE OR ANY MACHINERY ONTO WHICH THE SOFTWARE HAS BEEN INSTALLED WITHOUT AGREEING TO THE AGREEMENT.

Article 1. Intellectual Property Rights

The copyright, patent right or any other intellectual property right pertaining to the Software or any documentary attachments, such as manuals, as well as any copies thereof (the "Software and the Like") shall belong to CONTEC, and customers shall have no rights therefor other than those expressly authorized herein.

Article 2. Permitted License

- 1.CONTEC grants customers a non-exclusive right to install and use, free of charge, the Software solely for the purpose of using hardware products onto which the Software has been installed.
- 2.Customers may copy the Software for a minimum number of times as necessary solely for emergency backup purposes in using the Software. However, description regarding any of the rights pertaining to the Software supplied by CONTEC shall be attached to any such copies.
- 3.Customers may incorporate software provided by CONTEC as a library onto software created by the customer.

Article 3. Restrictions on Use

Customers shall not:

- (1) Create any derivative software from the Software other than as set forth herein;
- (2) Copy the Software other than as set forth therein;
- (3) Modify, adapt, decompile, disassemble or reverse-engineer the Software; or
- (4) Delete or alter the representation or trademark of the rights of the Software.

Article 4. Limited Liabilities

- 1.CONTEC HEREBY DISCLAIMS ANY WARRANTY WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE AND/OR NON-INFRINGEMENT OF THIRD PARTY RIGHTS.
- 2.TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL CONTEC BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE AND THE LIKE.

Article 5. Transfer

- 1.Customers may transfer their rights authorized them with respect to the Software and in accordance herein to a third party only when the customer satisfies all of the following conditions:
 - (1) The customer transfers the Agreement and the Software and the Like to such third party;
 - (2) The customer transfers to such third party all CONTEC hardware products onto which the Software has been downloaded; and
 - (3) The recipient of the transfer agrees to the terms and conditions herein.

Article 6. Termination

1. CONTEC may terminate the Agreement with immediate effect without any notice or demand to the customer if the customer fails to comply with any of the provisions herein.
2. Upon the termination of the Agreement, the customer's license shall cease to be effective. The customer shall immediately discontinue using the Software in any way, and shall uninstall and destruct any reproduction of the Software.

Article 7. Export Control

1. Customers shall comply with the Foreign Exchange and Foreign Trade Act of Japan, the U.S. Export Administration Regulation and the laws and regulations of any other country when taking the Software and the Like outside Japan.
2. Customers shall not transfer, export or re-export the Software and the Like to any individual or entity that is likely to use the Software and the Like to design, develop or manufacture nuclear weapons, biochemical weapons, or to design, develop or manufacture missiles.
3. Customers shall not transfer, export or re-export the Software and the Like to any individuals or entities set forth in the following countries or regions:
 - (1) The Republic of Cuba, The Islamic Republic of Iran, the Republic of Iraq, the Great Socialist People's Libyan Arab Jamahiriya or North Korea;
 - (2) Any individuals or entities on the "List of Foreign Users" based on the Import Trade Control Order or the U.S. Department of Commerce Denied Person's List or Entity List; or
 - (3) Any country, region, individual or entity designated by the government of Japan, the U.S. or any other relevant country.

Article 8. Governing Law

The provisions herein shall be construed and governed in accordance with the laws of Japan. This Agreement shall not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded.

Article 9. Dispute Resolution

Upon the occurrence of any dispute in relation to the Agreement or the Software, if any legal procedures are required, such as the filing of a petition for a lawsuit, the Osaka District Court shall have the exclusive jurisdiction over such dispute.

Article 10. Severability

If for any reason any portion of the provisions set forth herein is found to be invalid or unenforceable, the remainder of the Agreement shall not be affected in any way and shall be valid and enforceable to the extent permitted by law.

Notes Regarding Use

This manual explains the precautions for using the product safely. Please make sure to read this before using this product.

1.Safety Information

This document provides safety information using the following symbols to prevent accidents resulting in injury or death and the destruction of equipment and resources.

Understand the meanings of these labels to operate the equipment safely.

 DANGER	Signal word used to indicate an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Signal word used to indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

2. Handling Precautions

CAUTION

- The specifications of the product are subject to change without notice for enhancement and quality improvement. Even when using the product continuously, be sure to read the manual in the CONTEC's website and understand the contents.
 - Do not modify the software. CONTEC will bear no responsibility for any problems, etc., resulting from modifying the software.
 - Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using the software.
-

3. Security Warning

When connecting to the network, be aware of security-related problems. See the examples of Security measures below and set up the product properly along with the network devices.

1. Information Security Risks

- Unauthorized access from the outside through a network could cause the system halt, data damage, or exposure to malware. *1
- Invaded and used as a stepping stone, a device might attack the others through networks. (a victim becomes an assailant)
- Information might leak without realizing due to the connection to the network.
- Secondary damages such as harmful rumors, liability in damages, social credibility fall, and opportunity loss are expected led by the troubles described above.

*1: Malware (Malicious Software) is software that brings harm to a computer system and performs unintended operations.

2. Security Measures – e.g.

- Do not keep using the default password. (Refer to the product manual for the password setting).
- Set a strong password.

Combined with upper and lowercase letters, and numbers so that it cannot be easily analogized by others.

- Change the password periodically.
- Disable unnecessary network services and functions.
- Restrict access to the network with network devices. *2
- Restrict ports to be released on the network with network devices. *2
- Create a closed network connection using such as dedicated network or VPN*3

*2: Inquire for setting procedure to manufacturers.

*3: VPN (Virtual Private Network) a secured network that wards off unauthorized access by protecting the communication path with authentication and encryption.

Unfortunately, there are no perfect ways to avert unauthorized access or close a security hole that are endlessly found day and night.

Please understand that risks are always involved with the Internet connection, and we strongly recommend a user should constantly update information security measures.

Setup procedures


This manual describes the setup procedure that a user needs to perform after unpacking the product with a pre-installed operation system.
The setup of Ubuntu is performed interactively.

1. Ubuntu Setup


Check that the display, the keyboard and the mouse are connected with the PC. Do not connect other devices until a Ubuntu setup is completed. After confirming the connections, turn on the PC power.

⚠ CAUTION

- The screen change during the setup operation may take time for a while.
- Do not turn off the power of the personal computer during the setup operation. Turning off the computer power before completing the setup will result in Ubuntu system damages.
- The eMMC built into the preinstalled model are GPT formatted. And, OS area is formatted by EXT4.
- The display driver, the LAN driver, etc. are already incorporated. However, since a network setup is needed separately, please consult with the system administrator of a connection place network.

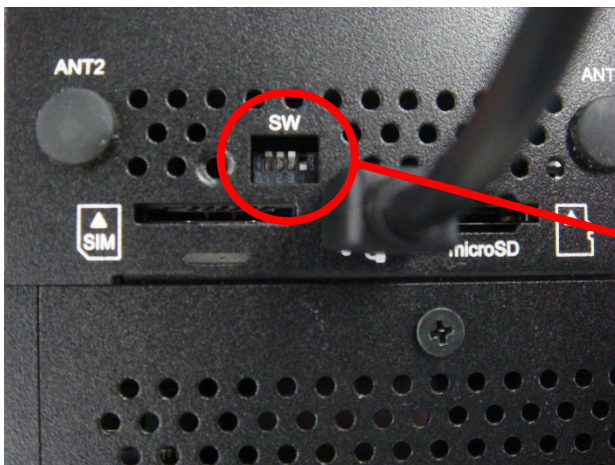


1. Set the DIPSW 4PIN on the side of the chassis to ON so that the system will watchdog-off when the power is turned on.

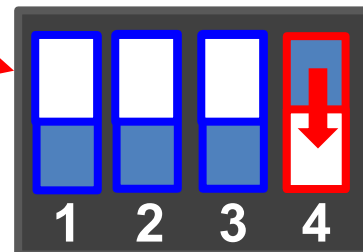

Turn on the power of the product. Please wait for the Ubuntu setup starts.


Follow the instructions on the display after start-up.

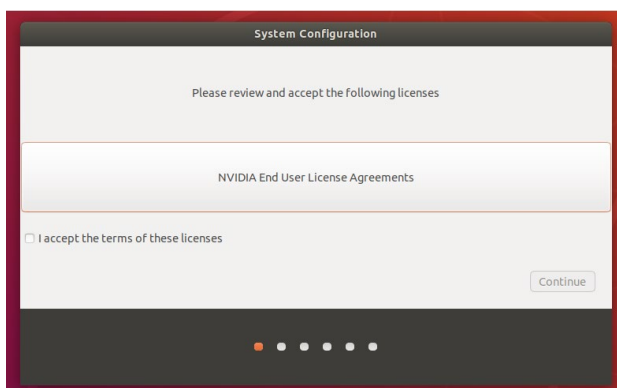


2. This is the documentation for the NVIDIA L4T licenses.

Please review and check off the box of ☐ I accept ~ to accept the licenses.


Click the .

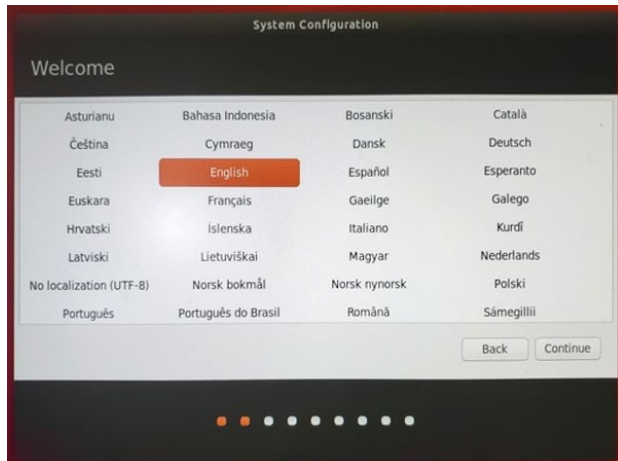


3. Select your preferred language.
Click the **Continue** button.
The following steps are explained using English as an example.

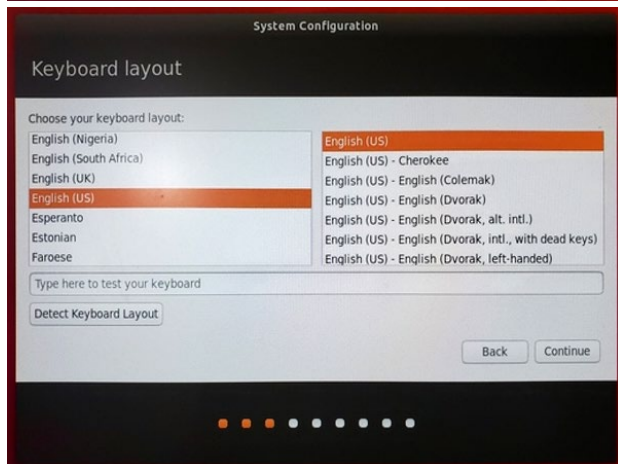


4. Select your preferred keyboard layout.
Click the **Continue** button.

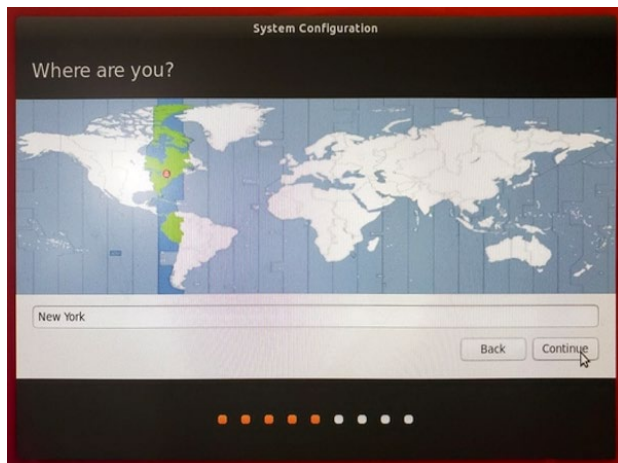


5. For Time Zone setting, select the local region where the system is used.
Click the **Continue** button.

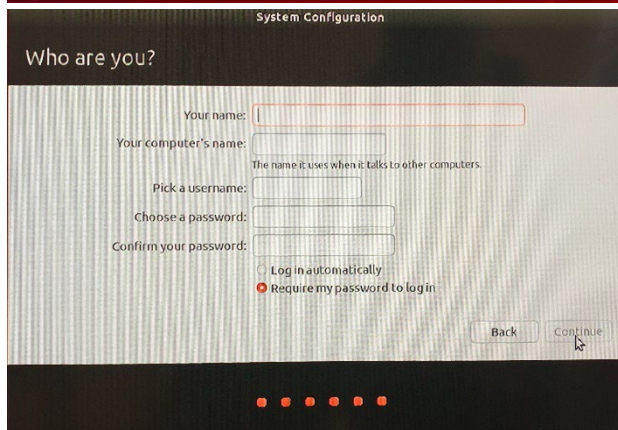


6. Type your name and your computer's name, pick a user name, and choose a password to be used for the Ubuntu desktop environment.
Click the **Continue** button.

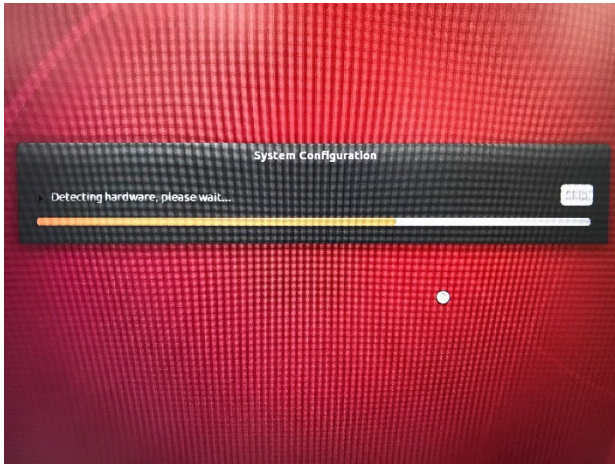


7. System Configuration will start.
It takes about one minute to complete the configuration.

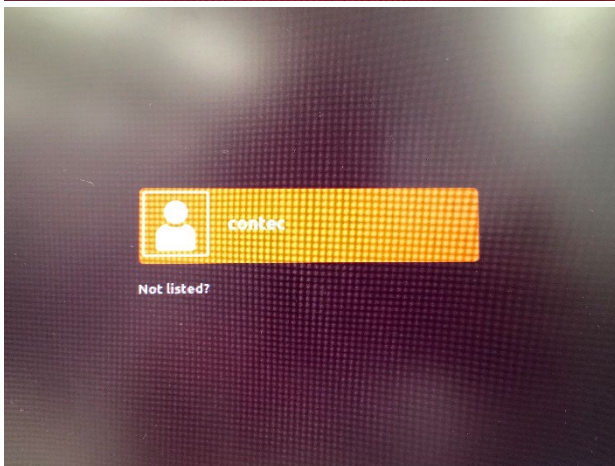


8. If you have checked off the box of [Require my password to log in], the login display will appear.

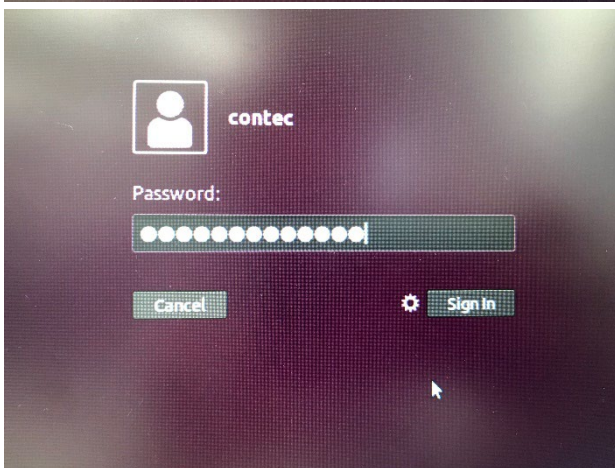


9. Type your password.
Click the **Sign In**.

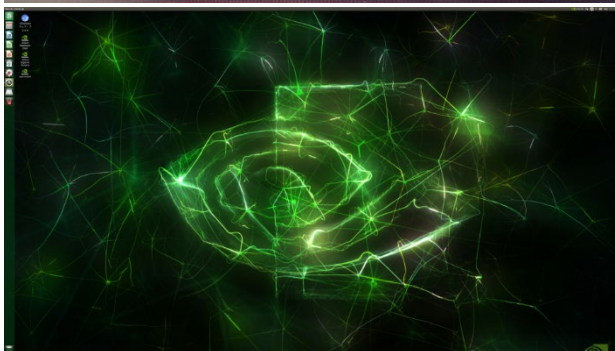

10. When the login process is completed, the desktop screen will appear.

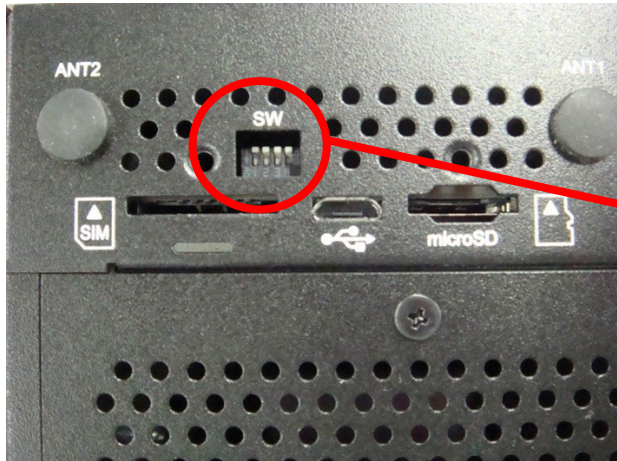

11. After turning off the power, set back the DIPSW 4PIN on the side of the chassis to OFF and switch to normal booting (eMMC).

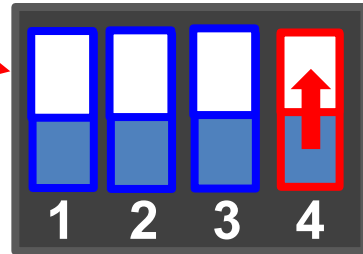

Recovery/VersionUp Method

This section explains how to recover the OS in the event that it is unable to start in the preinstalled model. Please also refer here when updating the eMMC firmware of pre-installed models.

1.Preparations

This section describes how to recover/versionup the OS of eMMC from the Host PC environment by connecting the host PC environment (Ubuntu 18.04 64bit) to the micro USB port of the DX-U1100.

Please obtain the following items in advance.

- Host PC Environment (Ubuntu 18.04 64bit)
- Display
- USB-HUB
- USB Keyboard
- USB Mouse
- The Product Itself
- Firmware File (mfi_jetson-nano-emmc_R32.x.x.tbz2)

Please check the following points and connect the device.

CAUTION

- Recovering with the firmware file will initialize the contents of the internal storage. Back up the data in the storage before performing OS recovery if it is important.
- Remove the connected disks if that are not composed in the pre-installed type from the body.
- Remove the USB storage device if it is connected to the body.

2.Procedure


Before performing the operation, connect the display, USB keyboard, and USB mouse to the host PC environment (Ubuntu 18.04 64bit), then start up Ubuntu OS. (The installation and setup procedures of the host PC environment OS are omitted here.)

1. Setting the DIPSW and Turning On The Power Of The Product

Set the DIPSW located on the side of the product.



1. Set the DIPSW 1PIN on the side of the chassis to ON so that the system will boot in recovery mode when the power is turned on. Also set the DIPSW 4PIN to ON so that the system will boot with watchdog-off.

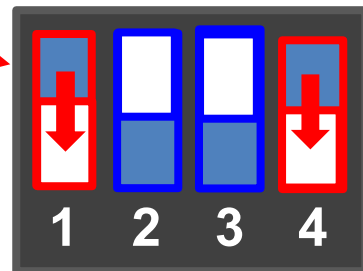


2. Connect the product and the host PC environment with the micro USB cable and turn on the power.

2. Extracting Firmware and Performing Write Operations


Write firmware via micro USB cable on the host PC environment (Ubuntu 18.04 64bit).




1. Start [Console] app on the Ubuntu environment.

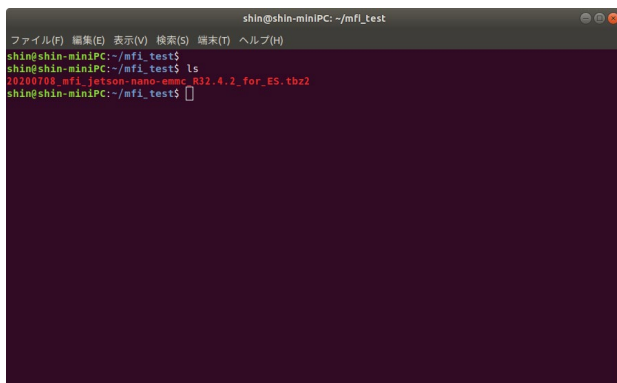

2. Place the recovery image file on the specified directory and check whether it can be seen from the [Console] app.

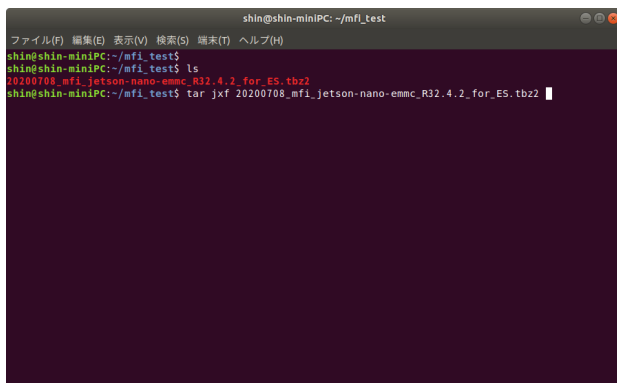

3. Extract the recovery file with tar command [tar jxf archive name.tbz2].

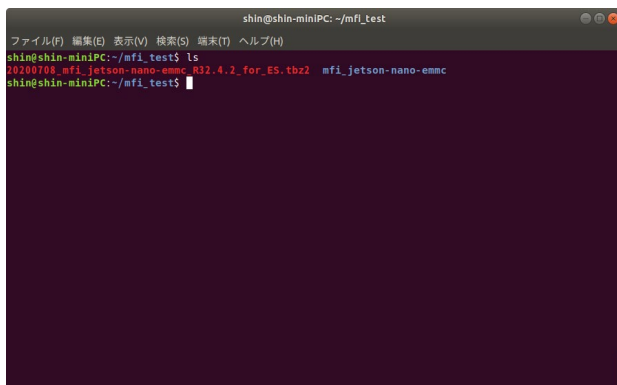

4. After unzipping, the file will be extracted to mfi_jetson-nano-emmc.

```
shin@shin-miniPC: ~/mfi_test/mfi_jetson-nano-emmc
ファイル(F) 編集(E) 表示(V) 検索(S) 端末(T) ヘルプ(H)
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ ls
20200708_mfi_jetson-nano-emmc_R32.4.2_for_ES.tbz2 mfi_jetson-nano-emmc
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ cd mfi_jetson-nano-emmc/
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
```

5. The file goes under the mfi_jetson-nano-emmc.

```
shin@shin-miniPC: ~/mfi_test/mfi_jetson-nano-emmc
ファイル(F) 編集(E) 表示(V) 検索(S) 端末(T) ヘルプ(H)
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ lsusb
Bus 002 Device 002: ID 8087:8000 Intel Corp.
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
Bus 001 Device 002: ID 8087:8008 Intel Corp.
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
Bus 003 Device 004: ID 093a:2510 Pixart Imaging, Inc. Optical Mouse
Bus 003 Device 126: ID 0955:7f21 Nvidia Corp.
Bus 003 Device 003: ID 0403:6015 Future Technology Devices International, Ltd Bridge(I2C/SPI/UART/FI
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
```


6. Use the lsusb command to confirm that the USB-IF of the CPU "Nvidia Corp" in the product is recognized.

```
shin@shin-miniPC: ~/mfi_test/mfi_jetson-nano-emmc
ファイル(F) 編集(E) 表示(V) 検索(S) 端末(T) ヘルプ(H)
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ lsusb
Bus 002 Device 002: ID 8087:8000 Intel Corp.
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
Bus 001 Device 002: ID 8087:8008 Intel Corp.
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
Bus 004 Device 001: ID 1d6b:0003 Linux Foundation 3.0 root hub
Bus 003 Device 004: ID 093a:2510 Pixart Imaging, Inc. Optical Mouse
Bus 003 Device 006: ID 0955:7f21 Nvidia Corp.
Bus 003 Device 002: ID 413c:2105 Dell Computer Corp. Model L100 Keyboard
Bus 003 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ sudo ./nvflash.sh --showlogs
Start flashing device: 3-3, PID: 13001
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
```


7. Use the "sudo ./nvflash.sh --showlogs" command to start recovery of the product via USB.

```
shin@shin-miniPC: ~/mfi_test/mfi_jetson-nano-emmc
ファイル(F) 編集(E) 表示(V) 検索(S) 端末(T) ヘルプ(H)
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ lsusb
Bus 002 Device 002: ID 8087:8000 Intel Corp.
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
Bus 001 Device 002: ID 8087:8008 Intel Corp.
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
Bus 004 Device 001: ID 1d6b:0003 Linux Foundation 3.0 root hub
Bus 003 Device 004: ID 093a:2510 Pixart Imaging, Inc. Optical Mouse
Bus 003 Device 006: ID 0955:7f21 Nvidia Corp.
Bus 003 Device 002: ID 413c:2105 Dell Computer Corp. Model L100 Keyboard
Bus 003 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$ sudo ./nvflash.sh --showlogs
Start flashing device: 3-3, PID: 13001
Flash complete (SUCCESS)
shin@shin-miniPC:~/mfi_test/mfi_jetson-nano-emmc$
```


8. Writing to the product will be completed in about 10 minutes. After completion, turn off the power of the product.

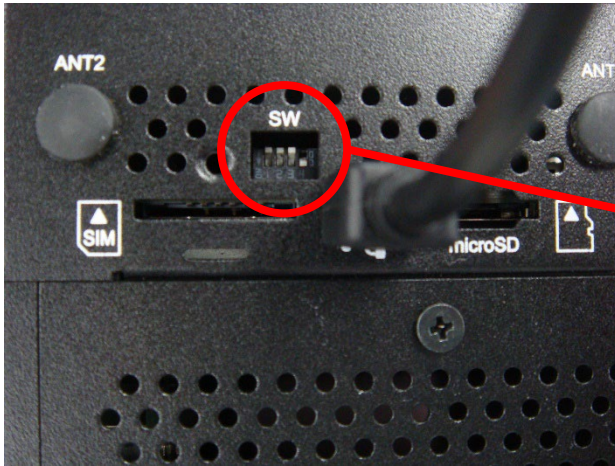

9. After turning off the power, set back the DIPSW 1PIN on the side of the chassis to OFF and switch to normal booting (eMMC).

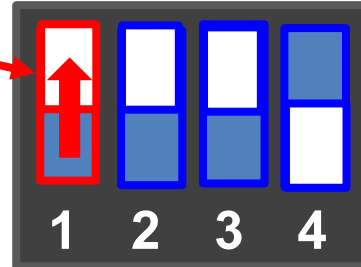

3. Starting up OS

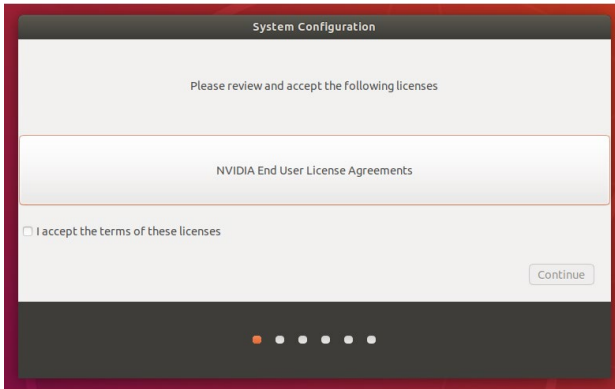

Turn on the power of the product again. The initial System Configuration screen of the Ubuntu OS will appear on the HDMI display. Continue to follow "Ubuntu Setup" to complete the Ubuntu setup.

Boot SD Write Procedure

This section explains how to write an SD image for SD Boot.

1.Preparations

This section describes how to insert an SD card into the host PC environment (Ubuntu 18.04 64bit) and write an SD image to the SD card. Please obtain the following items in advance.

- Host PC Environment (Ubuntu 18.04 64bit)
- balenaEtcher ApplImage File ("balenaEtcher-1.5.115-x64.ApplImage")
<https://github.com/balena-io/etcher/releases/tag/v1.5.115>
- USB SD Card Reader
- microSD Card (SDHC, Class 10, 16 GB or more)
- The Product Itself
- SD Image File (XavierNX_R32.x.x_xxx_sd_blob.img.tbz2)
Download from the CONTEC website.
 - * Use the same version as for the eMMC firmware.
 - * If the eMMC firmware and SD Image File versions do not match, please refer to "Recovery/VersionUp Method" to upgrade the eMMC firmware.
 - * The file is about 16 GB.
 - * The image file version may be updated at a later date.
- Checking the eMMC Firmware Version

Use the following command to check the firmware version after starting eMMC.

```
$ cat /etc/contec/CONTEC-L4T.version  
NANO-32.4.4-V002
```

2.Procedure

Before performing any operations, connect the display, USB keyboard, and USB mouse to the host PC environment (Ubuntu 18.04 64bit) and start the Ubuntu OS. ((The installation and setup procedures of the host PC environment OS are omitted here.)

1. Preparing the SD Image


After downloading the SD image file, use the following command to extract the compressed .tbz2 file into a .img file.

```
$ tar jxf JetsonNano_R32.x.x_Vxxx_sd_blob.img.tbz2
```


The file (XavierNX_R32.x.x_Vxxx_sd_blob.img) extracted using the command above will be used as the SD image being written.

2. Writing the SD Image


Use the SD card reader in the host PC environment (Ubuntu 18.04 64bit) to write the firmware file.

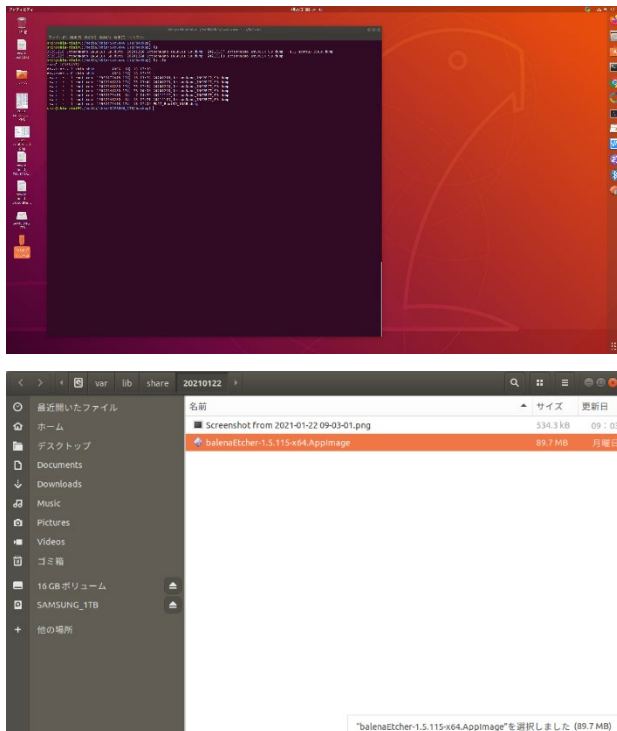


1. Insert the USB SD card reader into the Ubuntu PC and verify the SD card is recognized.
2. Start the [balenaEtcher] app on the host PC (Ubuntu).

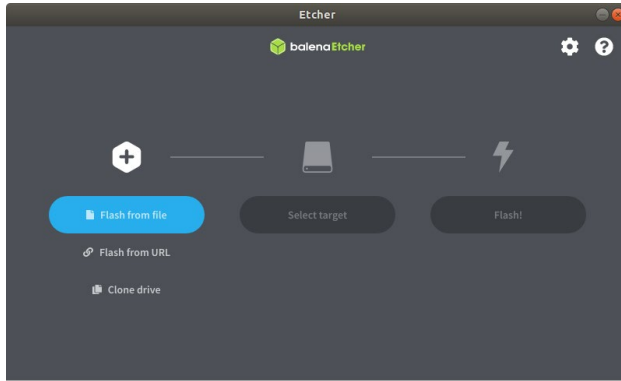


3. Select [Flash from file].

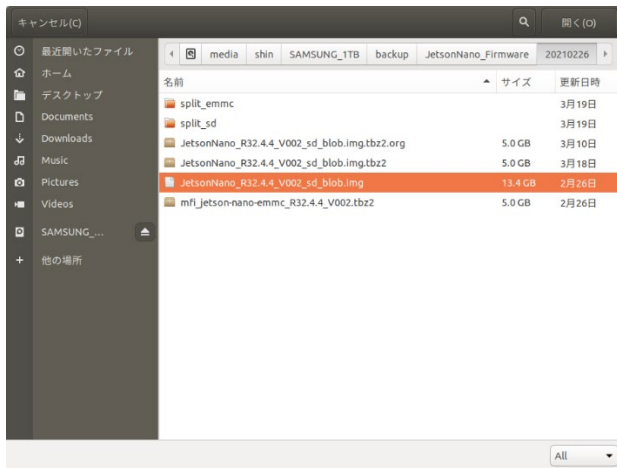


4. Select the SD image file saved to Ubuntu.

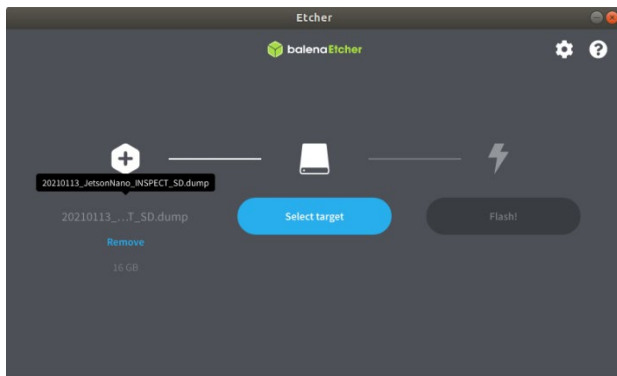


5. Select the target write drive under [Select target].

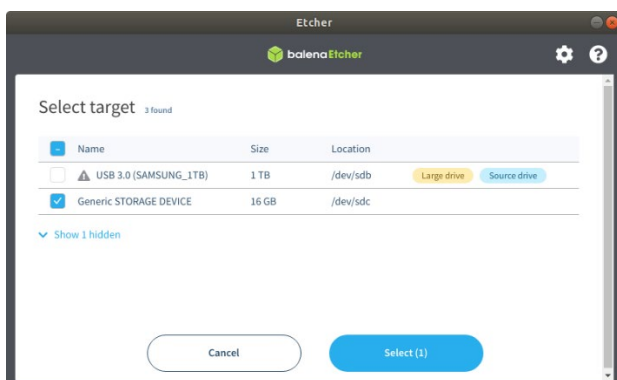

6. Select the inserted microSD card.
(* Selecting the boot drive by mistake will cause a host environment failure.)

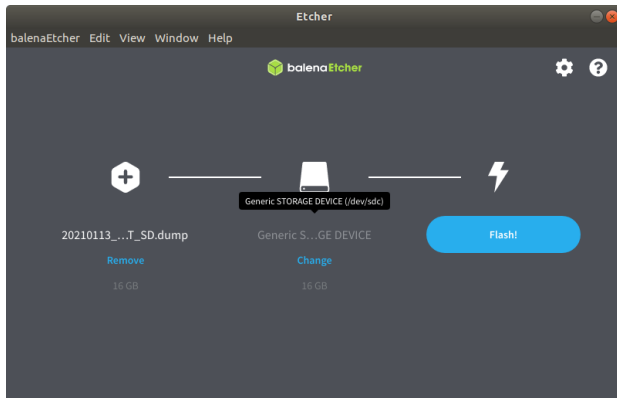


7. Press the [Flash] button to begin writing.


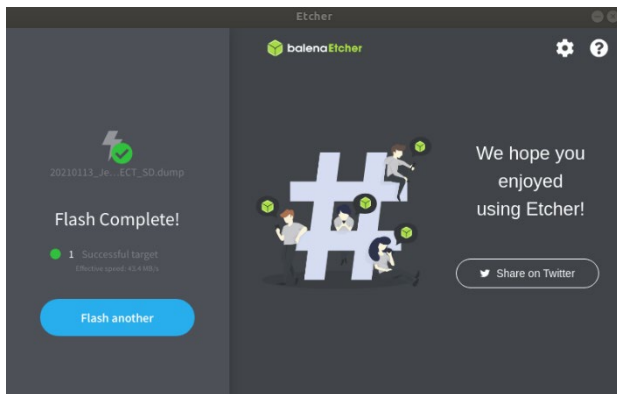


8. [Flash Complete] will be displayed when writing is complete.

3. OS Startup

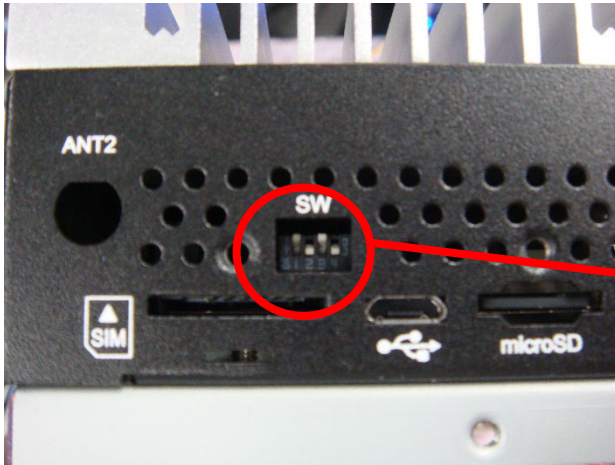

1. Insert the microSD card created in the previous section into the side of the chassis and switch DIPSW PIN2 to ON to boot from the SD card. To turn off the watchdog timer, also switch DIPSW PIN4 to ON.

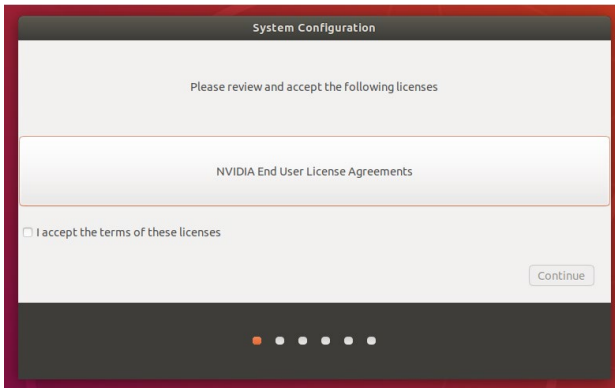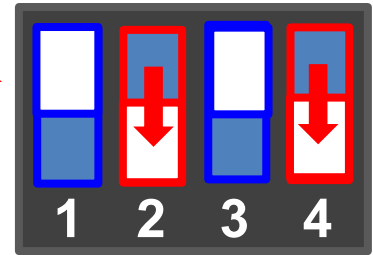

2. Turn on the power supply and verify that the initial System Configuration screen of the Ubuntu OS appears on the HDMI display. Continue to follow "Ubuntu Setup" to complete the Ubuntu setup.

Operational Checks

This section describes Linux OS environment in which operational checks have been conducted and the results of operational checks.

1. Operating Environment

◆ Distribution

The distributions used and their version information are as follows.

Ubuntu 18.04.5 LTS

```
root@contec-desktop:~# cat /proc/version
Linux version 4.9.140-tegra (shin@shin-miniPC) (gcc version 7.3.1 20180425 [linaro-7.3-2018.05
revision d29120a424ecfbc167ef90065c0eeb7f91977701] (Linaro GCC 7.3-2018.05) ) #1 SMP PREEMPT Thu
Feb 18 17:32:01 JST 2021

root@contec-desktop:~# uname -a
Linux contec-desktop 4.9.140-tegra #1 SMP PREEMPT Thu Feb 18 17:32:01 JST 2021 aarch64 aarch64
aarch64 GNU/Linux
```

◆ Configuration

No.	Equipment name	Maker	Model	Remarks
1	Industrial Edge AI Computer	CONTEC	DX-U1100P1	The product model with a Low Profile PCI Express(x1) slot
2	USB Keyboard/USB Mouse	-	-	
3	Display	ViewSonic	VS16861	HDMI/DisplayPort/ HDMI Audio (Speaker)
4	Device used to confirm network communication status	-	Generic PC	Wired LAN

* - : Not specified

2. List of Operational Checks

1. Operational Checks and Results

Only basic operations such as the installation and startup are verified as part of the operational checks. The operational checks were not conducted assuming all possible applications.


This manual covers operational checks that were conducted for the items below.

Item		Details	Result	Remarks
OS		Installation from USB-connected media is possible	○	
		Typical installation completes successfully	○	
Display	HDMI	Recommended display resolution is displayed	○	See Page 35
	DisplayPort	Recommended display resolution is displayed	○	See Page 36
	Dual display	Dual display is supported	○	See Page 37
Audio	HDMI Port Output	Confirmed that sound can be output from the display's speakers when connected to the HDMI Port	○	See Page 38
DIPSW		eMMC or SD Boot can be selected with DIPSW	○	See Page 33
Storage	eMMC	eMMC Boot is possible	○	See Page 39
	SD	SD Boot is possible		See Page 40
LAN		Package installation is possible using "apt" commands	○	
		Login is possible using SSH	○	See Page 44
USB	USB 2.0 Port	USB memory can be recognized	○	See Page 45
	USB 3.2 Gen1 (USB 3.0) Port	USB memory can be recognized	○	See Page 46
RAS	General-purpose I/O	Input/output operations are possible (DIO)	○	See Page 47
	LED	Alarm LED turns on/off	○	See Page 48
	WDT	Reset is possible after configuring timeout	○	See Page 48
	HW monitor	System temperature can be obtained		See Page 49
	HW monitor	Power voltage can be obtained		See Page 49
RTC		Time can be configured	○	See Page 50
CAMERA-IF		Input images can be HDMI output.	○	See Page 51
40-PIN HEADER	GPIO	Input/output operations are possible (GPIO)	○	See Page 54
	UART	Communication through loopback is possible	○	See Page 55
	SPI	Reading and writing for Serial Flash is possible	○	See Page 56
	I2C	I2C-EEPROM can be recognized	○	See Page 57

3. Operational Check Details

1. Boot Mode Setting

Setting can be done with the DIPSW 2PIN.

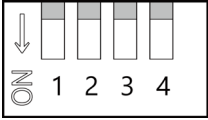	Bit No.	ON/OFF	Description
	1	ON	Turn this on for OS writing.
		OFF	Turn this off for a normal booting.
	2	ON	Setting this ON boots from the SD card. *1
		OFF	Setting this OFF boots from the embedded Multi Media Card (eMMC).
	3	System Reservation : Always OFF	
	4	ON	Turn this on for OS setup.
		OFF	Turn this off for a normal booting.

*1 Reading starts from the eMMC up to U-Boot, then from the SD card thereafter.

◆ eMMC Boot

Confirm that the operating system will boot from the Multi Media Card (eMMC) embedded in the CPU module by setting the DIPSW 2PIN on the side of the chassis to OFF.

```

contec@contec-desktop:~$ mount
/dev/mmcblk0p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
none on /dev type devtmpfs (rw,relatime,size=1785364K,nr_inodes=446341,mode=755)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
devpts on /dev/pts type devpts (rw,nosuid,noexec,relatime,gid=5,mode=620,ptmxmode=000)
tmpfs on /run type tmpfs (rw,nosuid,nodev,mode=755)
tmpfs on /run/lock type tmpfs (rw,nosuid,nodev,noexec,relatime,size=5120k)
tmpfs on /sys/fs/cgroup type tmpfs (ro,nosuid,nodev,noexec,mode=755)
cgroup on /sys/fs/cgroup/unified type cgroup2 (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/systemd type cgroup (rw,nosuid,nodev,noexec,relatime,xattr,name=systemd)
pstore on /sys/fs/pstore type pstore (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/cpuset type cgroup (rw,nosuid,nodev,noexec,relatime,cpuset)
cgroup on /sys/fs/cgroup/hugetlb type cgroup (rw,nosuid,nodev,noexec,relatime,hugetlb)
cgroup on /sys/fs/cgroup/pids type cgroup (rw,nosuid,nodev,noexec,relatime,pids)
cgroup on /sys/fs/cgroup/net_cls,net_prio type cgroup (rw,nosuid,nodev,noexec,relatime,net_cls,net_prio)
cgroup on /sys/fs/cgroup/cpu,cpuacct type cgroup (rw,nosuid,nodev,noexec,relatime,cpu,cpuacct)
cgroup on /sys/fs/cgroup/debug type cgroup (rw,nosuid,nodev,noexec,relatime,debug)
cgroup on /sys/fs/cgroup/memory type cgroup (rw,nosuid,nodev,noexec,relatime,memory)
cgroup on /sys/fs/cgroup/perf_event type cgroup (rw,nosuid,nodev,noexec,relatime,perf_event)
cgroup on /sys/fs/cgroup/blkio type cgroup (rw,nosuid,nodev,noexec,relatime,blkio)
cgroup on /sys/fs/cgroup/freezer type cgroup (rw,nosuid,nodev,noexec,relatime,freezer)
cgroup on /sys/fs/cgroup/devices type cgroup (rw,nosuid,nodev,noexec,relatime,devices)
systemd-1 on /proc/sys/fs/binfmt_misc type autofs (rw,relatime,fd=30,prgrp=1,timeout=0,minproto=5,maxproto=5,direct)
mqueue on /dev/mqueue type mqueue (rw,relatime)
hugetlbfs on /dev/hugepages type hugetlbfs (rw,relatime)
sunrpc on /run/rpc_pipefs type rpc_pipefs (rw,relatime)
debugfs on /sys/kernel/debug type debugfs (rw,relatime)
configfs on /sys/kernel/config type configfs (rw,relatime)
tmpfs on /run/user/120 type tmpfs (rw,nosuid,nodev,relatime,size=405964K,mode=700,uid=120,gid=124)
gvfsd-fuse on /run/user/120/gvfs type fuse.gvfsd-fuse (rw,nosuid,nodev,relatime,user_id=120,group_id=124)
fusectl on /sys/fs/fuse/connections type fusectl (rw,relatime)
tmpfs on /run/user/1000 type tmpfs (rw,nosuid,nodev,relatime,size=405964K,mode=700,uid=1000,gid=1000)
gvfsd-fuse on /run/user/1000/gvfs type fuse.gvfsd-fuse (rw,nosuid,nodev,relatime,user_id=1000,group_id=1000)

```

On the console App of the DX-U1100, execute the mount command and confirm that /dev/mmcblk0p1(eMMC) is mounted as /(root).

◆ SD Boot

Confirm that the operating system installed on a microSD card will boot by setting the DIPSW 2PIN on the side of the chassis to ON.

* For details on how to create an OS image to install on the microSD card, refer to “Boot SD Write Procedure (Page 24).”


```
contec@contec-desktop:~$ mount
/dev/mmcblk1p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
none on /dev type devtmpfs (rw,relatime,size=1781332k,nr_inodes=445333,mode=755)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
devpts on /dev/pts type devpts (rw,nosuid,noexec,relatime,gid=5,mode=620,ptmxmode=000)
tmpfs on /run type tmpfs (rw,nosuid,nodev,mode=755)
tmpfs on /run/lock type tmpfs (rw,nosuid,nodev,noexec,relatime,size=5120k)
tmpfs on /sys/fs/cgroup type tmpfs (ro,nosuid,nodev,noexec,mode=755)
cgroup on /sys/fs/cgroup/unified type cgroup2 (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/systemd type cgroup (rw,nosuid,nodev,noexec,relatime,xattr,name=systemd)
pstore on /sys/fs/pstore type pstore (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/cpu,cpuacct type cgroup (rw,nosuid,nodev,noexec,relatime,cpu,cpuacct)
cgroup on /sys/fs/cgroup/net_cls,net_prio type cgroup (rw,nosuid,nodev,noexec,relatime,net_cls,net_prio)
cgroup on /sys/fs/cgroup/perf_event type cgroup (rw,nosuid,nodev,noexec,relatime,perf_event)
cgroup on /sys/fs/cgroup/devices type cgroup (rw,nosuid,nodev,noexec,relatime,devices)
cgroup on /sys/fs/cgroup/debug type cgroup (rw,nosuid,nodev,noexec,relatime,debug)
cgroup on /sys/fs/cgroup/blkio type cgroup (rw,nosuid,nodev,noexec,relatime,blkio)
cgroup on /sys/fs/cgroup/pids type cgroup (rw,nosuid,nodev,noexec,relatime,pids)
cgroup on /sys/fs/cgroup/freezer type cgroup (rw,nosuid,nodev,noexec,relatime,freezer)
cgroup on /sys/fs/cgroup/cpuset type cgroup (rw,nosuid,nodev,noexec,relatime,cpuset)
cgroup on /sys/fs/cgroup/hugetlb type cgroup (rw,nosuid,nodev,noexec,relatime,huge_tlb)
cgroup on /sys/fs/cgroup/memory type cgroup (rw,nosuid,nodev,noexec,relatime,memory)
systemd-1 on /proc/sys/fs/binfmt_misc type autofs (rw,relatime,fd=34,pgrp=1,timeout=0,minproto=5,maxproto=5,direct)
```

On the console App of the DX-U1100, execute the mount command and confirm that /dev/mmcblk1p1(SD) is mounted as /(root).

2. Check the display

◆ HDMI Port

Select [System Settings]-[Displays]. Check the manufacturer information of the connected display and the recommended resolution of the display can be displayed. Also, check the resolution and rotation can be decided according to user's choice.

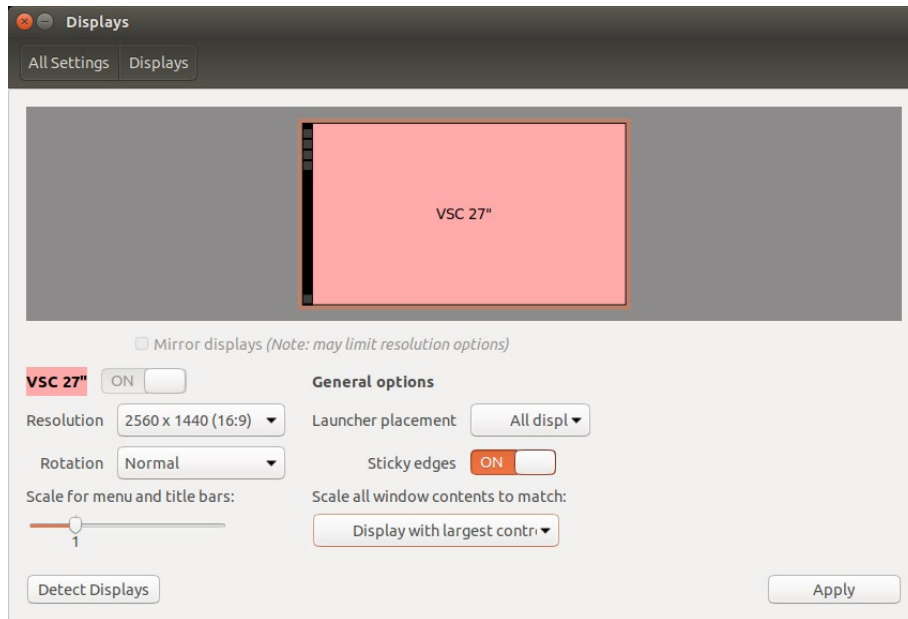


Special note:

The recommended resolution or the currently selected resolution may not be displayed if the HDMI cable is connected while the OS is running. In that case, use the display configuration tool again to choose the appropriate resolution.

◆ DisplayPort

Select [System Settings]-[Displays]. Check the manufacturer information of the connected display and the recommended resolution of the display can be displayed. Also, check the resolution and rotation can be decided according to user's choice.

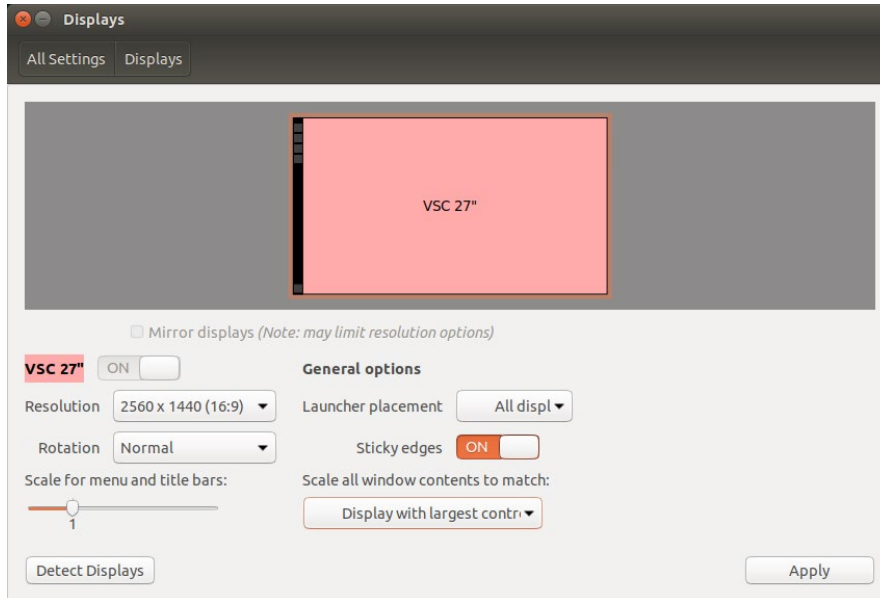

Special note:

The recommended resolution or the currently selected resolution may not be displayed if the DisplayPort cable is connected while the OS is running. In that case, use the display configuration tool again to choose the appropriate resolution.

◆ HDMI + DisplayPort

Select [System Settings]-[Displays]. Check the manufacturer information of the connected display and the recommended resolution of the display can be displayed. Also, check the resolution and rotation can be decided according to user's choice.



Special note:


The recommended resolution or the currently selected resolution may not be displayed if the HDMI cable and the DisplayPort cable are connected while the OS is running. In that case, use the display configuration tool again to choose the appropriate resolution.

3. HDMI Audio Operational Check


HDMI Output

Select [System Settings]-[Sound].

When using HDMI Port, select “HDMI/DisplayPort Built-in Audio” as the output destination, and press the [Test] button. The following test screen is displayed. Confirm that sound is output from the display by pressing the [Test] button.

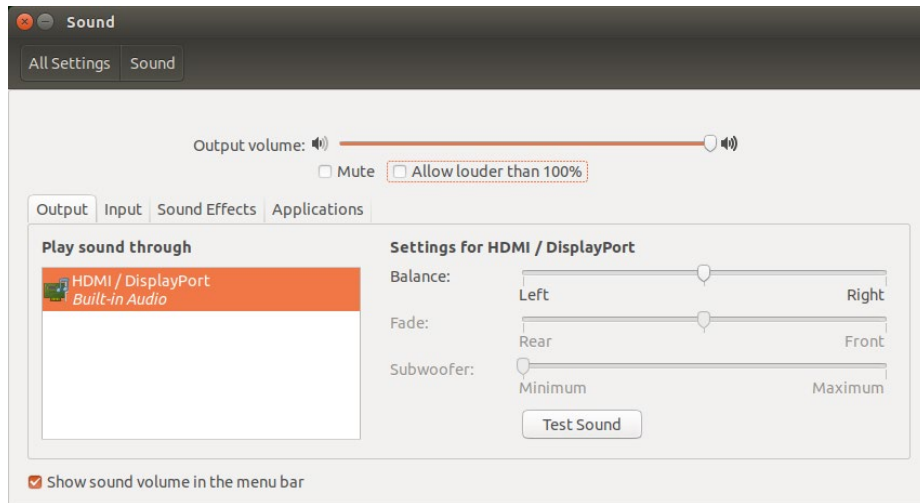

HDMI Port output test screen

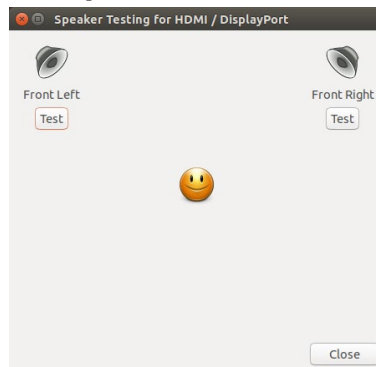

Special note:

As for DisplayPort cable, audio output cannot be supported since the specification of the product port is eDP (embedded DisplayPort).

4. Storage Operational Check

◆ eMMC

eMMC is recognized as /dev/mmcblk0.

Confirm that eMMC is mounted as Rootfs when booting from eMMC Boot.

```
root@contec-desktop:~# mount
/dev/mmcblk0p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
none on /dev type devtmpfs (rw,relatime,size=1781268k,nr_inodes=445317,mode=755)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
devpts on /dev/pts type devpts (rw,nosuid,noexec,relatime,gid=5,mode=620,ptmxmode=000)
tmpfs on /run type tmpfs (rw,nosuid,nodev,mode=755)
tmpfs on /run/lock type tmpfs (rw,nosuid,nodev,noexec,relatime,size=5120k)
tmpfs on /sys/fs/cgroup type tmpfs (ro,nosuid,nodev,noexec,mode=755)
cgroup on /sys/fs/cgroup/unified type cgroup2 (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/systemd type cgroup
(rw,nosuid,nodev,noexec,relatime,xattr,name=systemd)
pstore on /sys/fs/pstore type pstore (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/cpuset type cgroup (rw,nosuid,nodev,noexec,relatime,cpuset)
cgroup on /sys/fs/cgroup/net_cls,net_prio type cgroup
(rw,nosuid,nodev,noexec,relatime,net_cls,net_prio)
cgroup on /sys/fs/cgroup/memory type cgroup (rw,nosuid,nodev,noexec,relatime,memory)
cgroup on /sys/fs/cgroup/pids type cgroup (rw,nosuid,nodev,noexec,relatime,pids)
cgroup on /sys/fs/cgroup/freezer type cgroup (rw,nosuid,nodev,noexec,relatime,freezer)
cgroup on /sys/fs/cgroup/devices type cgroup (rw,nosuid,nodev,noexec,relatime,devices)
cgroup on /sys/fs/cgroup/debug type cgroup (rw,nosuid,nodev,noexec,relatime,debug)
cgroup on /sys/fs/cgroup/hugetlb type cgroup (rw,nosuid,nodev,noexec,relatime,hugetlb)
cgroup on /sys/fs/cgroup/blkio type cgroup (rw,nosuid,nodev,noexec,relatime,blkio)
cgroup on /sys/fs/cgroup/cpu,cpuacct type cgroup
(rw,nosuid,nodev,noexec,relatime,cpu,cpuacct)
cgroup on /sys/fs/cgroup/perf_event type cgroup
(rw,nosuid,nodev,noexec,relatime,perf_event)
mqueue on /dev/mqueue type mqueue (rw,relatime)
hugetlbfs on /dev/hugepages type hugetlbfs (rw,relatime)
sunrpc on /run/rpc_pipefs type rpc_pipefs (rw,relatime)
systemd-1 on /proc/sys/fs/binfmt_misc type autofs
(rw,relatime,fd=36,pgrp=1,timeout=0,minproto=5,maxproto=5,direct)
debugfs on /sys/kernel/debug type debugfs (rw,relatime)
configfs on /sys/kernel/config type configfs (rw,relatime)
tmpfs on /run/user/120 type tmpfs
(rw,nosuid,nodev,relatime,size=405144k,mode=700,uid=120,gid=124)
gvfsd-fuse on /run/user/120/gvfs type fuse.gvfsd-fuse
(rw,nosuid,nodev,relatime,user_id=120,group_id=124)
fusectl on /sys/fs/fuse/connections type fusectl (rw,relatime)
tmpfs on /run/user/1000 type tmpfs
(rw,nosuid,nodev,relatime,size=405144k,mode=700,uid=1000,gid=1001)
gvfsd-fuse on /run/user/1000/gvfs type fuse.gvfsd-fuse
(rw,nosuid,nodev,relatime,user_id=1000,group_id=1001)
```

◆ SD Card

SD card is recognized as `/dev/mmcblk1`.

Confirm that SD is mounted as Rootfs when booting from SD card.

```
root@contec-desktop:~# mount
/dev/mmcblk1p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
none on /dev type devtmpfs (rw,relatime,size=1781332k,nr_inodes=445333,mode=755)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
devpts on /dev/pts type devpts (rw,nosuid,noexec,relatime,gid=5,mode=620,ptmxmode=000)
tmpfs on /run type tmpfs (rw,nosuid,nodev,mode=755)
tmpfs on /run/lock type tmpfs (rw,nosuid,nodev,noexec,relatime,size=5120k)
tmpfs on /sys/fs/cgroup type tmpfs (ro,nosuid,nodev,noexec,mode=755)
cgroup on /sys/fs/cgroup/unified type cgroup2 (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/systemd type cgroup
(rw,nosuid,nodev,noexec,relatime,xattr,name=systemd)
pstore on /sys/fs/pstore type pstore (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/net_cls,net_prio type cgroup
(rw,nosuid,nodev,noexec,relatime,net_cls,net_prio)
cgroup on /sys/fs/cgroup/blkio type cgroup (rw,nosuid,nodev,noexec,relatime,blkio)
cgroup on /sys/fs/cgroup/freezer type cgroup (rw,nosuid,nodev,noexec,relatime,freezer)
cgroup on /sys/fs/cgroup/cpuset type cgroup (rw,nosuid,nodev,noexec,relatime,cpuset)
cgroup on /sys/fs/cgroup/devices type cgroup (rw,nosuid,nodev,noexec,relatime,devices)
cgroup on /sys/fs/cgroup/pids type cgroup (rw,nosuid,nodev,noexec,relatime,pids)
cgroup on /sys/fs/cgroup/memory type cgroup (rw,nosuid,nodev,noexec,relatime,memory)
cgroup on /sys/fs/cgroup/cpu,cpuacct type cgroup
(rw,nosuid,nodev,noexec,relatime,cpu,cpuacct)
cgroup on /sys/fs/cgroup/perf_event type cgroup
(rw,nosuid,nodev,noexec,relatime,perf_event)
cgroup on /sys/fs/cgroup/hugetlb type cgroup (rw,nosuid,nodev,noexec,relatime,hugetlb)
cgroup on /sys/fs/cgroup/debug type cgroup (rw,nosuid,nodev,noexec,relatime,debug)
systemd-1 on /proc/sys/fs/binfmt_misc type autofs
(rw,relatime,fd=27,pgrp=1,timeout=0,minproto=5,maxproto=5,direct)
mqueue on /dev/mqueue type mqueue (rw,relatime)
debugfs on /sys/kernel/debug type debugfs (rw,relatime)
hugetlbfs on /dev/hugepages type hugetlbfs (rw,relatime)
sunrpc on /run/rpc_pipefs type rpc_pipefs (rw,relatime)
configfs on /sys/kernel/config type configfs (rw,relatime)
tmpfs on /run/user/120 type tmpfs
(rw,nosuid,nodev,relatime,size=405160k,mode=700,uid=120,gid=124)
tmpfs on /run/user/1000 type tmpfs
(rw,nosuid,nodev,relatime,size=405160k,mode=700,uid=1000,gid=1001)
fusectl on /sys/fs/fuse/connections type fusectl (rw,relatime)
gvfsd-fuse on /run/user/120/gvfs type fuse.gvfsd-fuse
(rw,nosuid,nodev,relatime,user_id=120,group_id=124)
```

◆ Using a SD Card as External Storage When Booting From eMMC

SD card is recognized as `/dev/mmcblk1`.

After the card is inserted, it will be mounted under the `/media/[user name]/directory`.

```
contec@contec-desktop: ~$ mount
/dev/mmcblk0p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
none on /dev type devtmpfs (rw,relatime,size=1781268k,nr_inodes=445317,mode=755)
tmpfs on /dev/shm type tmpfs (rw,nosuid,nodev)
devpts on /dev/pts type devpts (rw,nosuid,noexec,relatime,gid=5,mode=620,ptmxmode=000)
tmpfs on /run type tmpfs (rw,nosuid,nodev,mode=755)
tmpfs on /run/lock type tmpfs (rw,nosuid,nodev,noexec,relatime,size=5120k)
tmpfs on /sys/fs/cgroup type tmpfs (ro,nosuid,nodev,noexec,mode=755)
cgroup on /sys/fs/cgroup/unified type cgroup2 (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/systemd type cgroup (rw,nosuid,nodev,noexec,relatime,xattr,name=systemd)
pstore on /sys/fs/pstore type pstore (rw,nosuid,nodev,noexec,relatime)
cgroup on /sys/fs/cgroup/perf_event type cgroup (rw,nosuid,nodev,noexec,relatime,perf_event)
cgroup on /sys/fs/cgroup/net_cls,net_prio type cgroup (rw,nosuid,nodev,noexec,relatime,net_cls,net_prio)
cgroup on /sys/fs/cgroup/pids type cgroup (rw,nosuid,nodev,noexec,relatime,pids)
cgroup on /sys/fs/cgroup/devices type cgroup (rw,nosuid,nodev,noexec,relatime,devices)
cgroup on /sys/fs/cgroup/blkio type cgroup (rw,nosuid,nodev,noexec,relatime,blkio)
cgroup on /sys/fs/cgroup/memory type cgroup (rw,nosuid,nodev,noexec,relatime,memory)
cgroup on /sys/fs/cgroup/hugetlb type cgroup (rw,nosuid,nodev,noexec,relatime,hugetlb)
cgroup on /sys/fs/cgroup/freezer type cgroup (rw,nosuid,nodev,noexec,relatime,freezer)
cgroup on /sys/fs/cgroup/cpu,cpuacct type cgroup (rw,nosuid,nodev,noexec,relatime,cpu,cpuacct)
cgroup on /sys/fs/cgroup/cpuset type cgroup (rw,nosuid,nodev,noexec,relatime,cpuset)
cgroup on /sys/fs/cgroup/debug type cgroup (rw,nosuid,nodev,noexec,relatime,debug)
systemd-1 on /proc/sys/fs/binfmt_misc type autofs (rw,relatime,fd=26,pgrp=1,timeout=0,minproto=5,maxproto=5,direct)
debugfs on /sys/kernel/debug type debugfs (rw,relatime)
sunrpc on /run/rpc_pipefs type rpc_pipefs (rw,relatime)
hugetlbfs on /dev/hugepages type hugetlbfs (rw,relatime)
mqueue on /dev/mqueue type mqueue (rw,relatime)
configfs on /sys/kernel/config type configfs (rw,relatime)
tmpfs on /run/user/120 type tmpfs (rw,nosuid,nodev,relatime,size=405144k,mode=700,uid=120,gid=124)
fusectl on /sys/fs/fuse/connections type fusectl (rw,relatime)
gvfsd-fuse on /run/user/120/gvfs type fuse.gvfsd-fuse (rw,nosuid,nodev,relatime,user_id=120,group_id=124)
tmpfs on /run/user/1000 type tmpfs (rw,nosuid,nodev,relatime,size=405144k,mode=700,uid=1000,gid=1001)
gvfsd-fuse on /run/user/1000/gvfs type fuse.gvfsd-fuse (rw,nosuid,nodev,relatime,user_id=1000,group_id=1001)
/dev/mmcblk1p1 on /media/contec/41c0d5e6-82d9-46b6-94d9-eed867943334 type ext4 (rw,nosuid,nodev,relatime,data=ordered,uhelper=udisks2)
contec@contec-desktop: ~$
```

By adding an entry to `/etc/fstab`, the card can always be mounted to a specific directory after booting.

5. LAN Operational Check

◆ Network Settings

The two Gigabit Ethernet ports are recognized by Linux as the following interface names, respectively.

LAN-A : eth1

```
eth1: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
      ether 00:04:4b:ea:58:53 txqueuelen 1000 (Ethernet)
      RX packets 0 bytes 0 (0.0 B)
      RX errors 0 dropped 0 overruns 0 frame 0
      TX packets 0 bytes 0 (0.0 B)
      TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
      device interrupt 156 base 0xe000
```

LAN-B : eth0


```
eth0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
      ether 00:80:4c:6b:9d:11 txqueuelen 1000 (Ethernet)
      RX packets 0 bytes 0 (0.0 B)
      RX errors 0 dropped 0 overruns 0 frame 0
      TX packets 0 bytes 0 (0.0 B)
      TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

GUI or nmcli command can be used for settings.


Setting with GUI




Select the network icon at the upper-right corner on the desktop, then select [Edit Connections...].

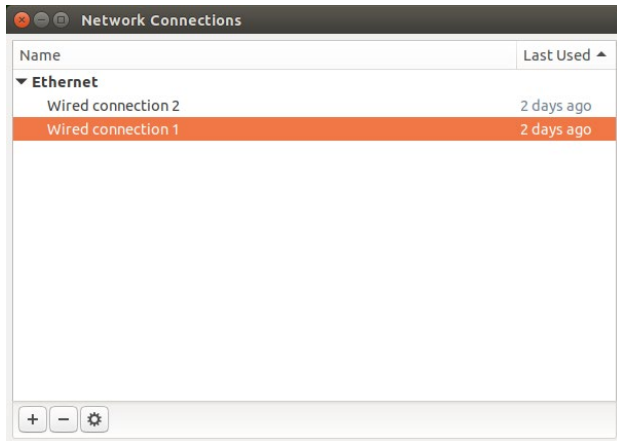

Select Wired connection 1 or 2, then select the setting icon at the lower-left corner.

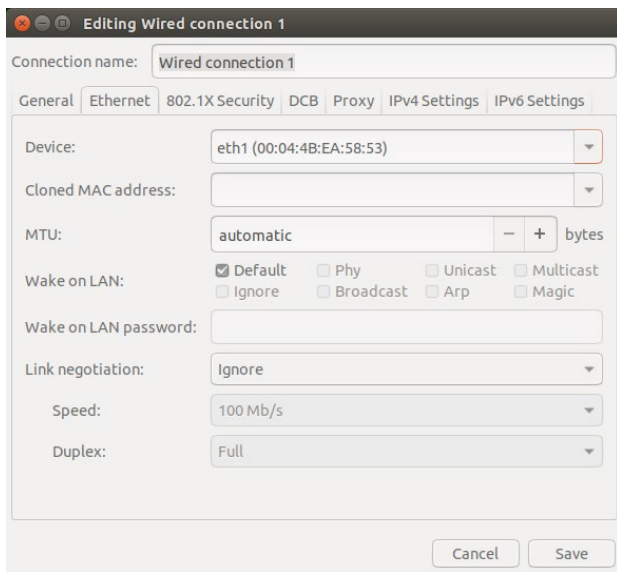

On Ethernet tab, select eth0(macaddr) or eth1(macaddr).

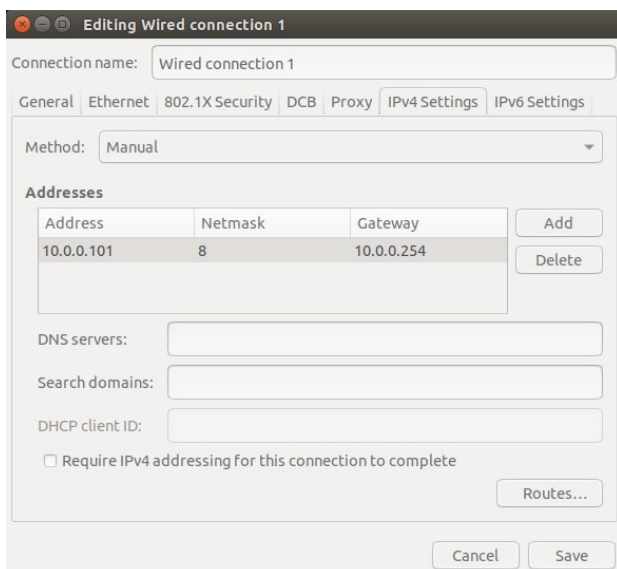

On IPv4 Settings tab, set Method, IP address, Netmask, and Gateway, then, click "Save" to save the settings.


◆ SSH Operations

Access the SSH server of the DX-U1100 Ubuntu and confirm that remote login can be performed.

For Linux, start a terminal and use the SSH command to make the connection.


```
root@contec-desktop:~# ssh user_name@ip_address
```

Use Tera Term on the Windows PC, enter the IP of the DX-U1100 to see whether connecting via SSH succeeds.

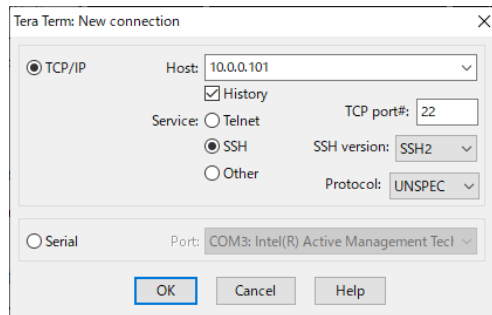

Enter the username and password used in the Linux configuration.

If everything is in order, connection will be completed as below.

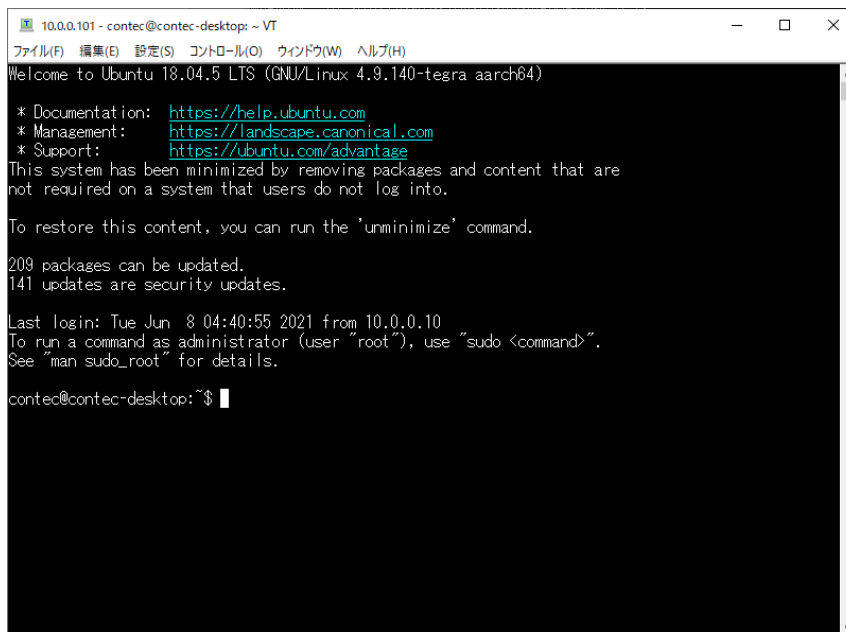

6. USB2.0 Port Operation Check

When a USB memory device is inserted into the USB2.0 Port, it will be recognized as shown below.

Before USB memory device is inserted

```
root@contec-desktop:~# lsusb -t
/: Bus 02.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/4p, 5000M
/: Bus 01.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/5p, 480M
   |__ Port 3: Dev 2, If 0, Class=Hub, Driver=hub/3p, 480M
```

After USB memory device is inserted

```
root@contec-desktop:~# lsusb
Bus 002 Device 001: ID 1d6b:0003 Linux Foundation 3.0 root hub
Bus 001 Device 003: ID 054c:0243 Sony Corp. MicroVault Flash Drive
Bus 001 Device 002: ID 0424:2514 Standard Microsystems Corp. USB 2.0 Hub
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub

root@contec-desktop:~# lsusb -t
/: Bus 02.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/4p, 5000M
/: Bus 01.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/5p, 480M
   |__ Port 3: Dev 2, If 0, Class=Hub, Driver=hub/3p, 480M
       |__ Port 1: Dev 3, If 0, Class=Mass Storage, Driver=usb-storage, 480M

root@contec-desktop:~# mount
/dev/mmcblk0p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
...
/dev/sda1 on /media/ea2de978-4dd0-42fe-b4a7-850476b72b47 type ext4
(rw,relatime,data=ordered)
```

7. USB3.2 Gen1 (USB3.0) Port Operational Check

When a USB memory device is inserted into the USB3.2 Gen1 (USB3.0) Port, it will be recognized as shown below.

Before USB memory device is inserted

```
root@contec-desktop:~# lsusb -t
/: Bus 02.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/4p, 5000M
/: Bus 01.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/5p, 480M
   |__ Port 3: Dev 2, If 0, Class=Hub, Driver=hub/3p, 480M
```

After USB memory device is inserted

```
root@contec-desktop:~# lsusb
Bus 002 Device 002: ID 0930:6545 Toshiba Corp. Kingston DataTraveler 102/2.0 / HEMA
Flash Drive 2 GB / PNY Attache 4GB Stick
Bus 002 Device 001: ID 1d6b:0003 Linux Foundation 3.0 root hub
Bus 001 Device 002: ID 0424:2514 Standard Microsystems Corp. USB 2.0 Hub
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub

root@contec-desktop:~# lsusb -t
/: Bus 02.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/4p, 5000M
   |__ Port 1: Dev 2, If 0, Class=Mass Storage, Driver=usb-storage, 5000M
/: Bus 01.Port 1: Dev 1, Class=root_hub, Driver=tegra-xusb/5p, 480M
   |__ Port 3: Dev 2, If 0, Class=Hub, Driver=hub/3p, 480M

root@contec-desktop:~# mount
/dev/mmcblk0p1 on / type ext4 (rw,relatime,data=ordered)
proc on /proc type proc (rw,relatime)
sysfs on /sys type sysfs (rw,relatime)
...
/dev/sda1 on /media/202FC8E73FF115F8 type fuseblk
(rw,relatime,user_id=0,group_id=0,allow_other,blksize=4096)
```

8. RAS Operational Check

The following section describes how to check the operations of the pre-installed RAS sample application.

◆ General-purpose I/O Operations

Launch a console window. Execute the DIO sample (ras_dio) as follows. The result is displayed.

```
root@contec-desktop:~# ras_dio
BUILD_DATE=Dec 25 2020:09:32:10
./ras_dio [-i|-o] [portnum] [value]
-i [portnum] : get port state
-o [portnum] [value] : set port state to [value]
+-----+-----+-----+-----+
|          | DI  | DIO |          |
+-----+-----+-----+-----+
|          | 1 0 | 1 0 | COM  |
+-----+-----+-----+-----+
| portnum | 0 1 | 2 3 |      |
+-----+-----+-----+-----+

Read the status of DI1 Port
root@contec-desktop:~# ras_dio -i 0
1

Write DIO1 Port
root@contec-desktop:~# ras_dio -o 2 1
```

Special notes:

Run the DIO sample to see that you can get the input state and change the output state.

◆ POWER LED Operations

Launch a console window. Run the `ras_misc` sample as follows, and see that the POWER LED turns off all lights, turns solid red, flashes red, and turns solid green.

Refer to the RAS-API document for details about the API.

```
#all lights off
root@contec-desktop:~# ras_misc -s 0
Set LED Status mode
MT_SetLEDStatus End

#solid red
root@contec-desktop:~# ras_misc -s 1
Set LED Status mode
MT_SetLEDStatus End

#flash red
root@contec-desktop:~# ras_misc -s 2
Set LED Status mode
MT_SetLEDStatus End

#solid green
root@contec-desktop:~# ras_misc -s 4
Set LED Status mode
MT_SetLEDStatus End
```

Special notes:

Confirm that the POWER LED turns on, turns off, and flashes.

◆ Watchdog Timer Operations

Launch a console window. Execute the WDT sample as follows, and confirm that the system is reset after WDT timeout. Refer to the RAS-API document for details about the API.

```
root@contec-desktop:~# ras_wdt -s 30
enter start WDT mode
MT_SetWDT End
MT_StartWDT End
```

Special notes:

In the execution example, the system will be reset about 30 seconds after executing the WDT sample.

(*If `ras_wdt` is already running, the WDT may not work properly.

Please make sure that there are no other `ras_wdt` processes running when you check the WDT operations.)

◆ Hardware Monitor Operational Check

Launch a console window. Execute the `ras_misc` sample as follows, and confirm that system temperature and the system's power-supply voltage can be retrieved. Refer to the RAS-API document for details about the API.

```
# retrieve system temperature
root@contec-desktop:~# ras_misc -t
enter stop ftemp mode
ftemp = 61.210762

# retrieve power-supply voltage
root@contec-desktop:~# ras_misc -l
enter fvol mode Setting
fvol = 23.626904
```

9. RTC Operational Check

Confirm that the date and time can be manually changed by entering the `timedatectl` command on the console screen.

```
root@contec-desktop:~# timedatectl set-ntp false    #Stop the systemd-timesyncd.service
root@contec-desktop:~# timedatectl set-time "2021-02-28 10:30:00"    #Set the time
manually
root@contec-desktop:~# timedatectl status    #Check the status
      Local time: Sun 2021-02-28 10:30:11 JST
      Universal time: Sun 2021-02-28 01:30:11 UTC
      RTC time: Sun 2021-02-28 01:30:11
      Time zone: Asia/Tokyo (JST, +0900)
      System clock synchronized: no
      systemd-timesyncd.service active: no
      RTC in local TZ: no
```

In addition, confirm that the RTC keeps the time even after the power is turned OFF->ON.

```
root@contec-desktop:~# timedatectl status
      Local time: Sun 2021-02-28 10:35:51 JST
      Universal time: Sun 2021-02-28 01:35:51 UTC
      RTC time: Sun 2021-02-28 01:35:51
      Time zone: Asia/Tokyo (JST, +0900)
      System clock synchronized: no
      systemd-timesyncd.service active: no
      RTC in local TZ: no
```

This is the procedure for synchronizing the time using the `systemd-timesyncd` service.
Set the server settings for time synchronization according to your environment.

```
root@contec-desktop:~# timedatectl set-ntp true    #Start the systemd-timesyncd.service
root@contec-desktop:~# timedatectl status    #Check the status
      Local time: Thu 2021-01-28 09:11:18 JST
      Universal time: Thu 2021-01-28 00:11:18 UTC
      RTC time: Thu 2021-01-28 00:11:19
      Time zone: Asia/Tokyo (JST, +0900)
      System clock synchronized: yes
      systemd-timesyncd.service active: yes
      RTC in local TZ: no
root@contec-desktop:~# vi /etc/systemd/timesyncd.conf    #Edit the setting file
root@contec-desktop:~# systemctl restart systemd-timesyncd    #Restart the service (Reflect the settings)
root@contec-desktop:~# timedatectl status    #Check the status
      Local time: Thu 2021-01-28 09:14:05 JST
      Universal time: Thu 2021-01-28 00:14:05 UTC
      RTC time: Thu 2021-01-28 00:14:06
      Time zone: Asia/Tokyo (JST, +0900)
      System clock synchronized: yes
      systemd-timesyncd.service active: yes
      RTC in local TZ: no
```

10. CAMERA-IF Operational Check

Connect the camera to the MIPI CSI-2 camera connector and confirm that the camera is recognized on the console screen.

```
root@contec-desktop:~# dmesg #Verify that the probe has been completed on the driver.
---
[ 1.517479] vi 54080000.vi: vi_probe: ++
[ 1.520292] vi 54080000.vi: initialized
[ 1.522328] vi 54080000.vi: subdev nvcsi--2 bound
[ 1.522342] vi 54080000.vi: subdev imx219 7-0010 bound

root@contec-desktop:~# ls -la /dev/video0 #Confirm recognition as video0.
crw-rw----+ 1 root video 81, 0 January 28 09:27 /dev/video0
```

Execute the Gstreamer. Confirm that camera input images can be HDMI output and displayed.

```
root@contec-desktop:~# gst-launch-1.0 nvarguscamerasrc ! nvoverlaysink
Setting pipeline to PAUSED ...
Pipeline is live and does not need PREROLL ...
Setting pipeline to PLAYING ...
New clock: GstSystemClock
GST_ARGUS: Creating output stream
CONSUMER: Waiting until producer is connected...
GST_ARGUS: Available Sensor modes :
GST_ARGUS: 3264 x 2464 FR = 21.000000 fps Duration = 47619048 ; Analog Gain range min 1.000000, max 10.625000; Exposure Range min 13000, max 683709000;
GST_ARGUS: 3264 x 1848 FR = 28.000001 fps Duration = 35714284 ; Analog Gain range min 1.000000, max 10.625000; Exposure Range min 13000, max 683709000;
GST_ARGUS: 1920 x 1080 FR = 29.999999 fps Duration = 33333334 ; Analog Gain range min 1.000000, max 10.625000; Exposure Range min 13000, max 683709000;
GST_ARGUS: 1280 x 720 FR = 59.999999 fps Duration = 16666667 ; Analog Gain range min 1.000000, max 10.625000; Exposure Range min 13000, max 683709000;
GST_ARGUS: 1280 x 720 FR = 120.000005 fps Duration = 8333333 ; Analog Gain range min 1.000000, max 10.625000; Exposure Range min 13000, max 683709000;
GST_ARGUS: Running with following settings:
  Camera index = 0
  Camera mode  = 2
  Output Stream W = 1920 H = 1080
  seconds to Run   = 0
  Frame Rate = 29.999999
GST_ARGUS: Setup Complete, Starting captures for 0 seconds
GST_ARGUS: Starting repeat capture requests.
CONSUMER: Producer has connected; continuing.
^Chandling interrupt.
Interrupt: Stopping pipeline ...
Execution ended after 0:00:09.749482496
Setting pipeline to PAUSED ...
Setting pipeline to READY ...
GST_ARGUS: Cleaning up
CONSUMER: Done Success
GST_ARGUS: Done Success
Setting pipeline to NULL ...
```


```
Freeing pipeline ...  
root@contec-desktop:~#
```

11. 40-PIN HEADER Operational Check

The 40-pin GPIO pin header is located on the back of the product model with an expansion slot.

(* Not compatible with JetsonNano EVK 40-pin GPIO pin header.)

GPIO Pin Header

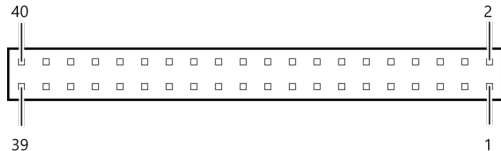Connector used on the product		2.54mm Pitch Pin Header	
			
Pin No.	Signal name	Pin No.	Signal name
2	3.3V	1	5.0V
4	I2C_SDA	3	5.0V
6	I2C_SCL	5	GND
8	GPA00	7	UART_TXD
10	GND	9	UART_RXD
12	UART_RTS	11	GPB00
14	GPA01	13	GND
16	GPA02	15	GPB01
18	3.3V	17	GPB02
20	SPI_MOSI	19	GND
22	SPI_MISO	21	GPB03
24	SPI_SCK	23	SPI_CS0
26	GND	25	SPI_CS1
28	I2C_SDA	27	I2C_SCL
30	GPA03	29	GND
32	GPA04	31	GPB04
34	GPA05	33	GND
36	GPA06	35	UART_CTS
38	GPA07	37	GPB05
40	GND	39	GPB06

*1 GPIOs are indicated with the signal names GPA0x and GPB0x.

*2 The two channels of I2C pins are on the same bus.

◆ GPIO

GPA00 - GPB06 are assigned to gpio-488 - gpio502.

```
root@contec-desktop:~# cat /sys/kernel/debug/gpio
...
gpiochip2: GPIOs 488-503, parent: i2c/0-0020, tca9539, can sleep:
gpio-488 (GPA00          )
gpio-489 (GPA01          )
gpio-490 (GPA02          )
gpio-491 (GPA03          )
gpio-492 (GPA04          )
gpio-493 (GPA05          )
gpio-494 (GPA06          )
gpio-495 (GPA07          )
gpio-496 (GPB00          )
gpio-497 (GPB01          )
gpio-498 (GPB02          )
gpio-499 (GPB03          )
gpio-500 (GPB04          )
gpio-501 (GPB05          )
gpio-502 (GPB06          )
gpio-503 (                )
```

By exporting each GPIO number to /sys/class/gpio, input values can be input and output values can be output.

```
#When setting GPA00 to Output 1
root@contec-desktop:~# echo 488 > /sys/class/gpio/export
root@contec-desktop:~# echo out > /sys/class/gpio/gpio488/direction
root@contec-desktop:~# cat /sys/class/gpio/gpio488/direction
out
root@contec-desktop:~# echo 1 > /sys/class/gpio/gpio488/value

#When setting GPB00 to Input and read
root@contec-desktop:~# echo 496 > /sys/class/gpio/export
root@contec-desktop:~# echo in > /sys/class/gpio/gpio496/direction
root@contec-desktop:~# cat /sys/class/gpio/gpio496/direction
in
root@contec-desktop:~# cat /sys/class/gpio/gpio496/value
0
```

◆ UART

UART_TXD and UART_RXD are assigned to /dev/ttyTHS1.

We looped back UART_TXD/UART_RXD and confirmed with the linux-serial-test that sending/receiving communication can be performed.

```
root@contec-desktop:~# cat /sys/kernel/debug/gpio
...
gpiochip2: GPIOs 488-503, parent: i2c/0-0020, tca9539, can sleep:
gpio-488 (GPA00      )
gpio-489 (GPA01      )
gpio-490 (GPA02      )
gpio-491 (GPA03      )
gpio-492 (GPA04      )
gpio-493 (GPA05      )
gpio-494 (GPA06      )
gpio-495 (GPA07      )
gpio-496 (GPB00      )
gpio-497 (GPB01      )
gpio-498 (GPB02      )
gpio-499 (GPB03      )
gpio-500 (GPB04      )
gpio-501 (GPB05      )
gpio-502 (GPB06      )
gpio-503 (           )
```

◆ SPI

SPI-BUS (SPI_MOSI/SPI_MISO/SPI_SCK/SPI_CS0/SPI_CS1) is assigned as

/dev/spidev0.0 (CS PIN: SPI_CS0)

/dev/spidev0.1 (CS PIN: SPI_CS1).

In the environment of the CONTEC, we connected serial EEPROM (25LC128) and confirmed that reading /writing communication can be performed as follows.

```
# Write values of 0-255 bytes incremented by 1 byte
root@contec-desktop:~# 25lc128 -d /dev/spidev0.0 -c

# Display 0-255 bytes
root@contec-desktop:~# 25lc128 -d /dev/spidev0.0 -s
00 01 02 03 04 05 06 07 08 09 0a 0b 0c 0d 0e 0f
10 11 12 13 14 15 16 17 18 19 1a 1b 1c 1d 1e 1f
20 21 22 23 24 25 26 27 28 29 2a 2b 2c 2d 2e 2f
30 31 32 33 34 35 36 37 38 39 3a 3b 3c 3d 3e 3f
40 41 42 43 44 45 46 47 48 49 4a 4b 4c 4d 4e 4f
50 51 52 53 54 55 56 57 58 59 5a 5b 5c 5d 5e 5f
60 61 62 63 64 65 66 67 68 69 6a 6b 6c 6d 6e 6f
70 71 72 73 74 75 76 77 78 79 7a 7b 7c 7d 7e 7f
80 81 82 83 84 85 86 87 88 89 8a 8b 8c 8d 8e 8f
90 91 92 93 94 95 96 97 98 99 9a 9b 9c 9d 9e 9f
a0 a1 a2 a3 a4 a5 a6 a7 a8 a9 aa ab ac ad ae af
b0 b1 b2 b3 b4 b5 b6 b7 b8 b9 ba bb bc bd be bf
c0 c1 c2 c3 c4 c5 c6 c7 c8 c9 ca cb cc cd ce cf
d0 d1 d2 d3 d4 d5 d6 d7 d8 d9 da db dc dd de df
e0 e1 e2 e3 e4 e5 e6 e7 e8 e9 ea eb ec ed ee ef
f0 f1 f2 f3 f4 f5 f6 f7 f8 f9 fa fb fc fd fe ff

# Erase 0-255byte
root@contec-desktop:~# 25lc128 -d /dev/spidev0.0 -e
```

◆ I2C

I2C-BUS(I2C_SCL,I2C_SDA) is assigned to /dev/i2c-1.

In the environment of the CONTEC, we connected I2C-EEPROM(24LC256) and confirmed that CHIP Addr can be recognized.

```
root@contec-desktop:~# i2cdetect -y -a -r 1
    0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
10: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
20: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
30: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
40: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
50: 50 51 -- -- -- -- -- -- -- -- -- -- -- -- --
60: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
70: -- -- -- -- -- -- -- -- -- -- -- -- -- -- --
```

Customer Support and Inquiry

CONTEC provides the following support services for you to use CONTEC products more efficiently and comfortably.


1.Services

CONTEC offers the useful information including product manuals that can be downloaded through the Contec website.

Download

<https://www.contec.com/download/>

You can download updated driver software, firmware, and differential manuals in several languages. Membership registration (myCONTEC) is required to use the services.

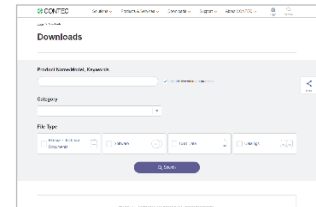

Revision History

MONTH YEAR	Summary of Changes
March 2021	The First Edition
May 2022	Added note about firmware version upgrade

Copyright

Copyright 2021 CONTEC CO., LTD. ALL RIGHTS RESERVED.

- No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.
- CONTEC CO., LTD. makes no commitment to update or keep current the information contained in this document.
- The information in this document is subject to change without notice.
- All relevant issues have been considered in the preparation of this document. Should you notice an omission or any questionable item in this document, please feel free to notify your retailer.
- Regardless of the foregoing statement, CONTEC assumes no responsibility for any errors that may appear in this document or for results obtained by the user as a result of using this product.

Trademarks

Other brand and product names are trademarks of their respective holder.

CONTEC CO., LTD. 3-9-31, Himesato, Nishiyodogawa-ku, Osaka 555-0025, Japan

<https://www.contec.com/>

No part of this document may be copied or reproduced in any form by any means without prior written consent of CONTEC CO., LTD.

DX-U1100 Reference Manual Software

NA08037 (LYZJ043) 05132022_rev3 [03122021]

May 2022 Edition